



# Programming Guide

Advanced 2D Image Scanner



**This Programming Guide is intended for:**

- **2D Image Hands-Free Scanner: Z-8072 Plus**

## **Revision History**

Changes to the original manual are listed below:

<b>Version</b>	<b>Date</b>	<b>Description of Version</b>
1.0	2018/08/16	Initial release
1.1	2018/11/16	Added new Code 32, data editing, and phone features
1.2	2018/11/23	Codabar feature descriptions updated
1.3	2018/11/27	RSS descriptions updated; added enter in ASCII code
1.4	2018/12/25	Added Alt mode, more data editing support, continue mode behavior
1.5	2019/04/03	Added Turkey country codes
1.6	2019/5/23	Keyboard Caps Lock State added
1.7	2019/6/18	GS1 decoding added

# Important Notice

No warranty of any kind is made in regard to this material, including, but not limited to, implied warranties of merchantability or fitness for any particular purpose. We are not liable for any errors contained herein nor for incidental or consequential damages in connection with furnishing, performance or use of this material. We shall be under no liability in respect of any defect arising from fair wear and tear, willful damage, negligence, abnormal working conditions, failure to follow the instructions and warnings, or misuse or alteration or repair of the products without written approval. No part of this document may be reproduced, transmitted, stored in a retrieval system, transcribed, or translated into any human or computer or other language in any form or by any means electronic, mechanical, magnetic, optical, chemical, biological, manual or otherwise, except for brief passages which may be quoted for purposes of scholastic or literary review, without express written consent and authorization. We reserve the right to make changes in product design without reservation and without notification. The material in this guide is for information only and is subject to change without notice. All trademarks mentioned herein, registered or otherwise, are the properties of their various, ill, assorted owners.

## ***General Handling Precautions***

- Do not dispose the scanner in fire.
- Do not put the scanner directly in the sun or by any heat source.
- Do not use or store the scanner in a very humid place.
- Do not drop the scanner or allow it to collide violently with other objects.
- Do not take the scanner apart without authorization

## ***Guidance for Printing***

This manual is in A5 size. Please double check your printer setting before printing it out. When the barcodes are to be printed out for programming, the use of a high-resolution laser printer is strongly suggested for the best scan result.

## **Firmware Notice**

To use all functions in this guide please update to the latest firmware.

Copyright © 2019. All rights reserved.

# Table of Contents

Important Notice.....	2
General Handling Precautions.....	2
Guidance for Printing .....	2
Using the Scanner .....	8
Beeper Indication.....	8
Settings and Programming .....	9
Program Set Up Flow.....	9
User Preferences .....	10
Show Version.....	10
System Settings .....	10
Customer's Factory Default.....	11
Scan Mode .....	12
Continue Mode behavior .....	13
Same Code Delay Time for Continue Scan Mode.....	14
Interface Switch.....	15
Good Read Beep Length.....	16
Good Read Beep Frequency.....	17
Aiming Pattern .....	18
Motion Detect Sensibility.....	19
Phone Mode.....	20
Terminal Character .....	22
RS232 Baud Rate .....	23
RS232 Parity Bit .....	25
RS232 Stop Bit .....	26
RS232 Data Bit.....	27
USB Speed .....	28
Country Code .....	29
Persian/Arabic Language Encoding Support.....	35
Readable Symbologies .....	36
All Symbologies .....	36
UPC-A .....	37
UPC-E.....	38
EAN-8 .....	39
EAN 13.....	40
JAN code for Books.....	41
Code 128 .....	42
Code 39 .....	43
Code 93 .....	44
Code 32 .....	45
Code 11 .....	46
Codabar .....	47

Plessey .....	48
MSI/Plessey .....	49
Interleaved 2 of 5 .....	50
IATA 2 of 5 .....	51
Matrix 2 of 5 .....	52
Straight 2 of 5 .....	53
RSS 14 (GS1 DATABAR 14) .....	54
RSS Expanded (GS1 DataBar Expanded) .....	55
RSS Limited (GS1 DataBar Limited) .....	56
GS1-128 AIM ID .....	57
GS1-2D AIM ID .....	58
Component CC-A .....	59
Component CC-B .....	60
Component CC-C .....	61
PDF417 .....	62
Data Matrix .....	64
QR Code .....	65
Micro QR Code .....	66
Aztec .....	67
MaxiCode .....	68
Symbology Features .....	69
UPC / EAN .....	69
UPC-A .....	70
UPC-E .....	72
EAN 8 .....	74
EAN 13 .....	75
EAN 13 Data Redundant Check .....	77
JAN code for Books Separator .....	78
Code 39 .....	80
Code 39 Redundant Check .....	82
Code 32 (Italian Pharmacode) .....	83
Codabar .....	84
Codabar Redundant Check .....	86
Interleaved 2 of 5 .....	87
MSI / Plessey .....	89
Code 11 .....	91
Data Matrix .....	93
QR / Micro QR .....	95
Japanese Language Encoding Support .....	97
Aztec .....	98
GS1 DataBar 14 Stacked decoding .....	99
GS1 DataBar Expanded Stacked decoding .....	100

Data Editing (Prefix) .....	101
Prefix Set Up Flow .....	101
All Prefix .....	102
UPC / EAN Prefix.....	103
Code 128 Prefix.....	105
Code 39 Prefix .....	106
Code 93 Prefix .....	107
Code 32 Prefix.....	108
Code 11 Prefix .....	109
Codabar Prefix.....	110
Plessey Prefix.....	111
MSI Prefix .....	112
Interleaved 2 of 5Prefix .....	113
IATA 2 of 5 Prefix .....	114
Matrix 2 of 5 Prefix.....	115
Straight 2 of 5 Prefix.....	116
RSS 14 Prefix (GS1 DataBar 14 Prefix) .....	117
RSS Expanded Prefix (GS1 DataBar Expanded Prefix).....	118
RSS Limited Prefix (GS1 DataBar Limited Prefix) .....	119
Component CC-A Prefix.....	120
Component CC-B Prefix.....	121
Component CC-C Prefix.....	122
PDF 417 Prefix .....	123
Micro PDF 417 Prefix.....	124
Data Matrix Prefix .....	125
QR Prefix .....	126
Micro QR Prefix .....	127
Aztec Prefix.....	128
MaxiCode Prefix .....	129
Data Editing (Suffix).....	130
Suffix Set Up Flow.....	130
All Suffix .....	131
UPC-A Suffix .....	132
UPC-E Suffix.....	133
EAN 8 Suffix.....	134
EAN 13 Suffix.....	135
Code 128 Suffix .....	136
Code 39 Suffix .....	137
Code 93 Suffix .....	138
Code 32 Suffix .....	139
Code 11 Suffix .....	140
Codabar Suffix .....	141

Plessey Suffix.....	142
MSI Suffix .....	143
Interleaved 2 of 5 Suffix .....	144
IATA 2 of 5 Suffix.....	145
Matrix 2 of 5 Suffix .....	146
Straight 2 of 5 Suffix .....	147
RSS 14 Suffix (GS1 DataBar 14 Suffix).....	148
RSS Expanded Suffix (GS1 DataBar Expanded Suffix) .....	149
RSS Limited Suffix (GS1 DataBar Limited Suffix).....	150
Component CC-A Suffix.....	151
Component CC-B Suffix .....	152
Component CC-C Suffix .....	153
PDF-417 Suffix.....	154
Micro PDF-417 Suffix.....	155
Data Matrix Suffix.....	156
QR Code Suffix.....	157
Micro QR Suffix .....	158
Aztec Suffix.....	159
MaxiCode Suffix .....	160
Data Editing (Truncate/Return) .....	161
Set All Symbologies Truncate/Return.....	162
Set UPC-A Truncate/Return.....	164
Set UPC-E Truncate/Return .....	166
Set EAN-8 Truncate/Return .....	168
Set EAN 13 Truncate/Return .....	170
Set Code 128 Truncate/Return.....	172
Set Code 39 Truncate/Return.....	174
Set Code 93 Truncate/Return.....	176
Set Code 32 Truncate/Return.....	178
Set Code 11 Truncate/Return.....	180
Set Codabar Truncate/Return .....	182
Set Plessey Truncate/Return .....	184
Set MSI (Modified Plessy) Truncate/Return .....	186
Set Interleaved 2 of 5 Truncate/Return .....	188
Set IATA 2 of 5 Truncate/Return .....	190
Set Matrix 2 of 5 Truncate/Return .....	192
Set Straight 2 of 5 Truncate/Return .....	194
Set RSS 14 (GS1 DataBar) Truncate/Return .....	196
Set RSS Expanded (GS1 DataBar Expanded) Truncate/Return .....	198
Set RSS Limited (GS1 DataBar Limited) Truncate/Return .....	200
Set Component CC-A Truncate/Return .....	202
Set Component CC-B Truncate/Return.....	204

Set Component CC-C Truncate/Return.....	206
Set PDF 417 Truncate/Return.....	208
Set Micro PDF 417 Truncate/Return .....	210
Set Data Matrix Truncate/Return.....	212
Set QR Truncate/Return .....	214
Set Micro QR Truncate/Return .....	216
Set Aztec Truncate/Return .....	218
Set MaxiCode Truncate/Return .....	220
<b>Code Settings .....</b>	<b>222</b>
Set Lengths for Codes.....	222
Set Lengths for Code 128 .....	224
Set Lengths for Code 39 .....	225
Set Lengths for Code 93 .....	226
Set Lengths for Codabar .....	227
Set Lengths for Interleaved 2 of 5 .....	228
Set Lengths for Code 11 .....	229
Set Lengths for MSI .....	230
Set Lengths for Matrix 2 of 5 .....	231
Code Identifiers.....	232
Code Identifiers Table .....	233
Keyboard Caps Lock State .....	234
Function Key Mapping .....	236
ASCII Code .....	237
<b>JavaPOS Driver V2.00 for Win32/Win64 .....</b>	<b>258</b>
JavaPOS Version .....	258
Install the Java2 Runtime Environment.....	258
Install the Service Object and JavaPOS files.....	258
How to use RS232 scanner with JavaPOS Driver .....	258
Use barcodes to configure the Handheld scanner .....	259
Running the JavaPOS Test utility .....	260
How to use JavaPOS driver at your application.....	260
How to use USB scanner with JavaPOS Driver .....	261
Install the Java RXTXcomm API .....	262
Running the JavaPOS Test utility .....	262
How to Use JavaPOS Driver at your application .....	263

# Using the Scanner

## Beeper Indication

---

Beeps	Indication
3 beeps in a series from low to high pitch	Power up
1 short beep	A barcode has been successfully decoded
2 short beeps	The scanner has entered program mode
1 long beep	A setting has been programmed
3 beeps in a series from low to high pitch	The scanner has exited program mode
3 short beeps	Error setting the scanner

# Settings and Programming

Scan selected barcodes in this manual to affect setup and programming of your handheld imaging barcode scanner. Decoding options and interface protocols can be tailored to a specific application.

Setup parameters are stored in non-volatile memory in the scanner and are retained even when power is off. Setup parameters change only when you reset them. You may need to hide adjacent code patches with your hand when scanning.

## ***Program Set Up Flow***

Scan "Set" to set up --> Scan selected barcode --> Scan "End" to confirm the setup.

# User Preferences

## Show Version


Scan this barcode to display firmware version.



Read device information

## System Settings


Scan this barcode to return all parameters to the default values.

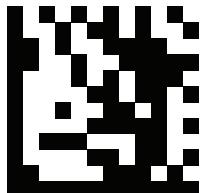

Set




Factory default settings

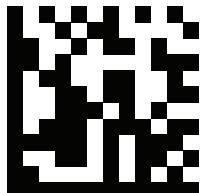


End

## ***Customer's Factory Default***

Scan barcodes below to set or delete customer's factory default.

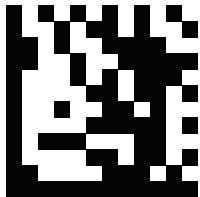


Set

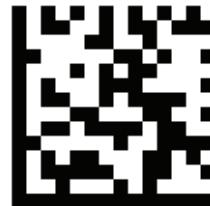

Save customer's factory default



Delete customer's factory default

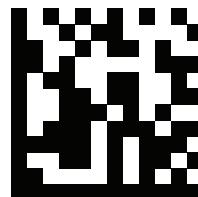


End


## Scan Mode

Scan a barcodes below to set the scanner to different modes.

Presentation and Continue Scan modes allow automatic scan when barcodes are present in front of the scanner. In Continue Scan mode, the scan LED stays active and continues to decode. Trigger mode allows triggered scans.

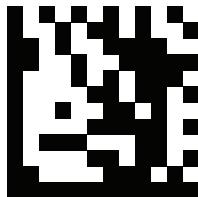


Set

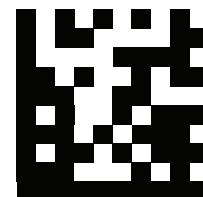

Presentation Mode  
(Default)



Continue Scan Mode

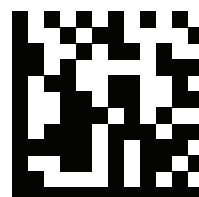

End


## ***Continue Mode behavior***

Auto

Default behavior, offers maximum depth of field.

Regular

Set scanner to regular to reduce working range.

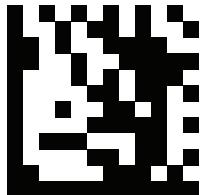


Set



Regular




Auto (Default)

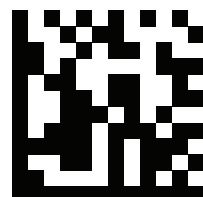

End

**Same Code Delay Time for Continue Scan Mode**

Scan a barcode below to select the duration of the delay time for scan code.

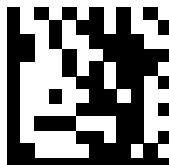

Set




500 msec




1 sec (Default)



1.5 sec

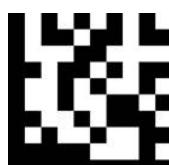

2 sec

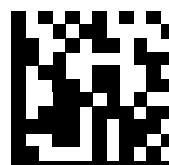


End

## **Interface Switch**


Your 2D Imager supports interfaces such as USB HID, RS232 serial, and USB virtual COM. To switch the interface, simply select the appropriate cable and configure the proper interface by following interface selection.




Set

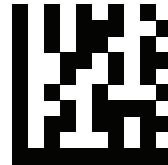

RS-232

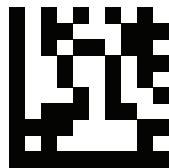


USB Keyboard (Default)

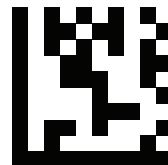

USB Virtual COM Port


\*Driver required

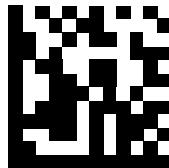


End

## ***Good Read Beep Length***

Scan a barcode below to select the duration of the beep signal after a good decode.

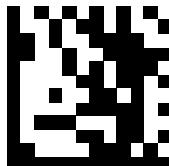

Set

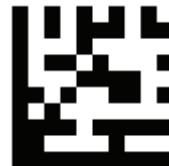

50 msec (Default)




100 msec



150 msec




200 msec

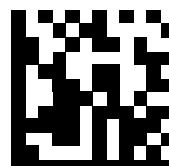

End

## ***Good Read Beep Frequency***

Scan a barcode below to select the beep tone of the beep signal after a good decode.

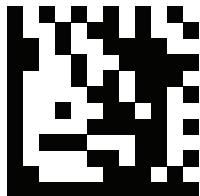

Set




Low



Medium (Default)



High

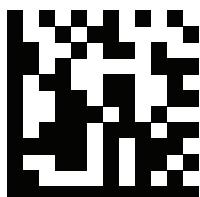

End

## Aiming Pattern

Aiming pattern works as an aiming system to aid in barcode reading. Use the following settings to enable or disable this function. This function is for supporting models only.



Set



Auto



Always Off (Default)



End


## ***Motion Detect Sensibility***




Set




Level 1 (Low)

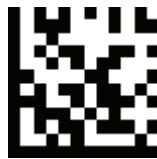


Level 2

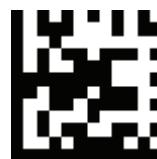

Level 3 (Default)

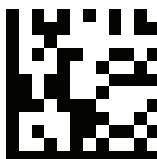

Level 4

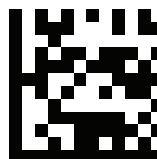

Level 5 (High)




End

## Phone Mode

LED turns to orange when Phone mode is enabled.




Set

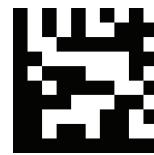


Phone key enable


Trigger key is used for Phone mode switch

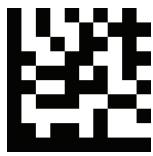


Phone key disable (Default)  
Trigger key is used for scanning

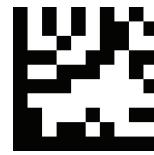


Phone mode enable

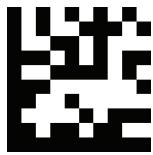


Phone mode disable (Default)

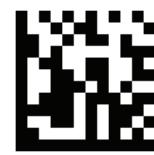


End

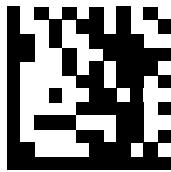


Set

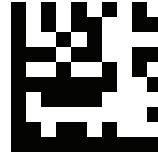

Phone mode enable  
(Illumination LED Standby off)

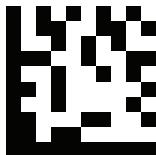


Phone mode enable  
(Illumination LED Standby Low)

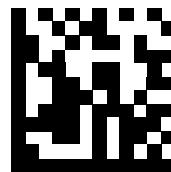


End


**Terminal Character**

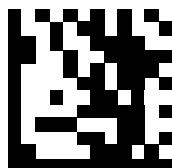


Set

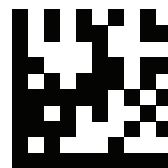


None

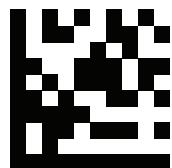


CR/LF (Default)

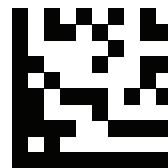

CR

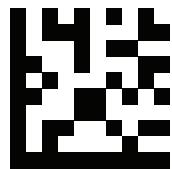


TAB

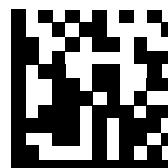


End

## **RS232 Baud Rate**


Baud rate is the number of bits of data transmitted per second. Set the imager's baud rate to match the baud rate setting of the host device. Otherwise, data may not reach the host device or may reach it in distorted form.

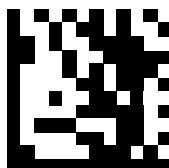


Set

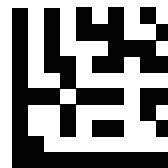


9600 (Default)

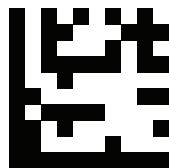


19200

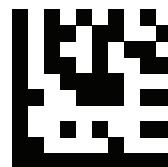


38400

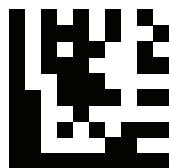


57600

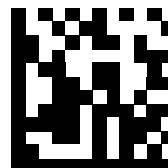


End

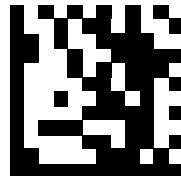

Set

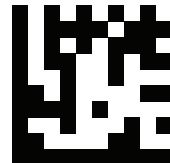


115200

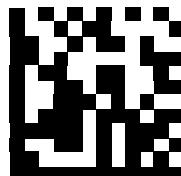


End

## **RS232 Parity Bit**


Parity bit can be added to ensure the total number of the string is even or odd.

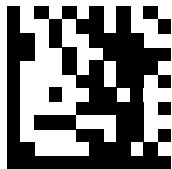


Set

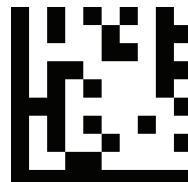


None (Default)

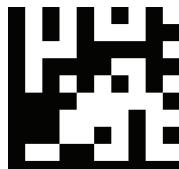

Even parity

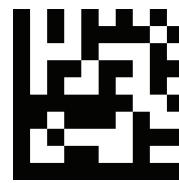


Odd parity

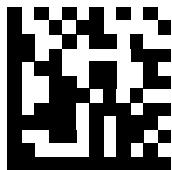


End

## RS232 Stop Bit


Stop bit is used to signal the end of a transmission.

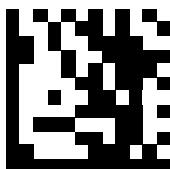


Set

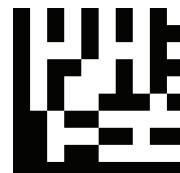

1 Stop Bit (Default)

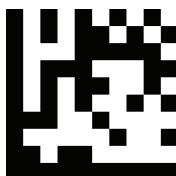


2 Stop Bit

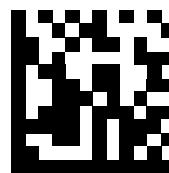

End

## **RS232 Data Bit**


Data bit sets the word length at 7 or 8 bits of data per character.

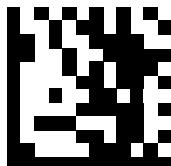


Set



CS7

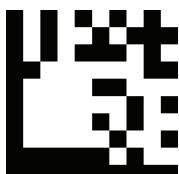


CS8 (Default)

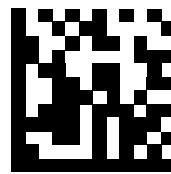

End

## ***USB Speed***

Scann the following settings to change the USB speed.

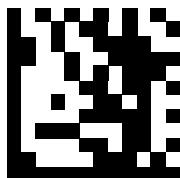


Set



USB 2.0 (For Standard version)




USB 1.1 (For Specific Customer version)

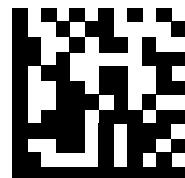

End

## ***Country Code***

Scann the following settings to change the country code.

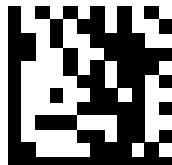

Set



US (Default)




Belgium




Britain



Denmark

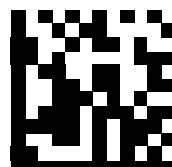

End

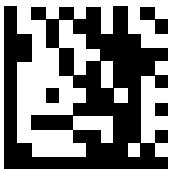

Set



France




Germany




Italy




Norway

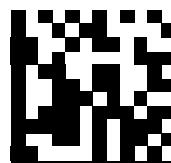


End

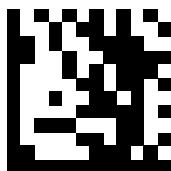


Set

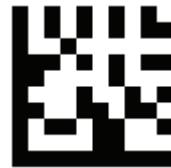

Portugal

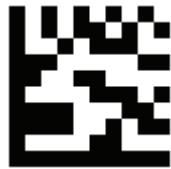


Spain

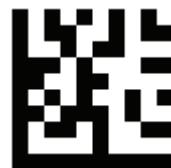


Sweden



Switzerland

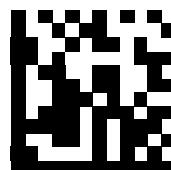


End

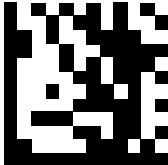

Set



Japan

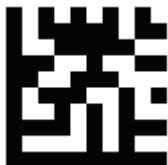


Hungary




Czech Republic



Slovakia

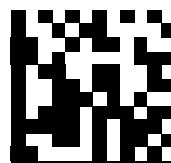

End

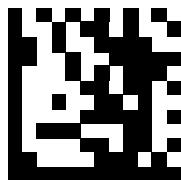

Set




Romania




Croatia




Poland

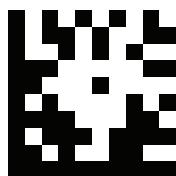

International Keyboard mode  
(ALT mode)

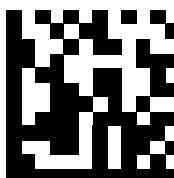

End

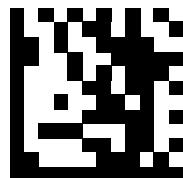


Set



Turkey-Q




Turkey-F

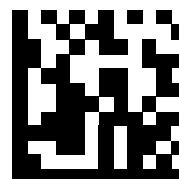

End

## **Persian/Arabic Language Encoding Support**

Scann the following settings to change the encoding options.

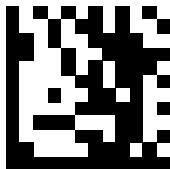

Set




UTF-8 (Default)



ISO 8859-6



CP1256 (WINDOWS-1256)

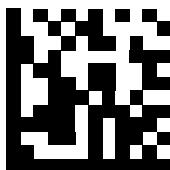


End

# Readable Symbologies

This section provides the programming barcodes for enabling and disabling readable symbologies. If the default values suit requirements, programming is not necessary.

## All Symbologies

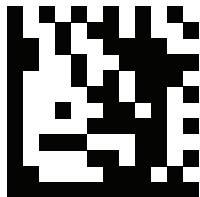


Set



Enable All




Default

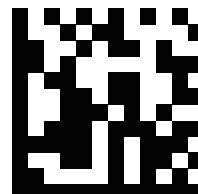

End

## **UPC-A**

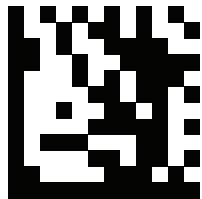


Set



Enable UPC-A (Default)




Disable UPC-A

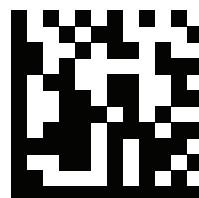

End

**UPC-E**

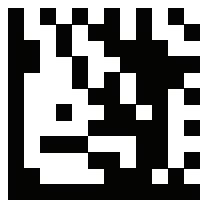


Set



Enable UPC-E (Default)




Disable UPC-E

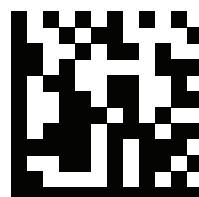

End

## EAN-8

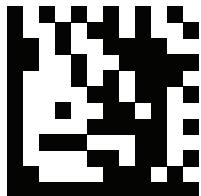


Set



Enable EAN 8 (Default)




Disable EAN 8

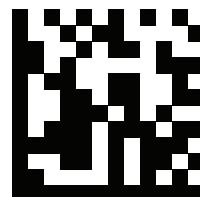

End

**EAN 13**

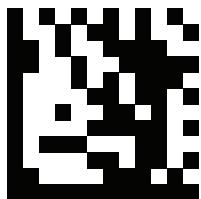


Set



Enable EAN 13 (Default)




Disable EAN 13

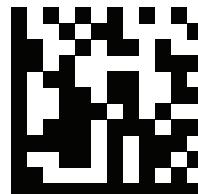


End

## *JAN code for Books*

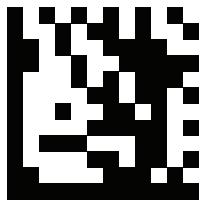


Set

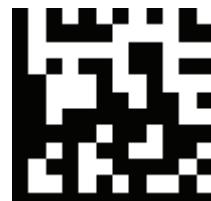

Enable




Disable (Default)

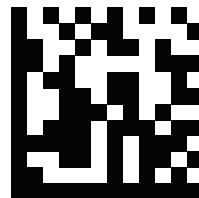

End

***Code 128***

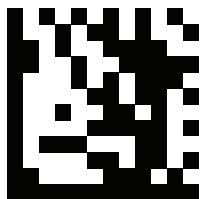


Set



Enable Code 128 (Default)




Disable Code 128

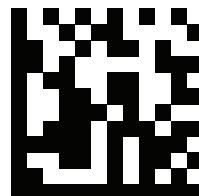

End

## **Code 39**

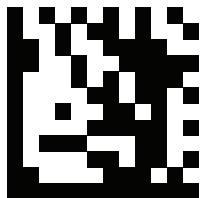


Set



Enable Code 39 (Default)




Disable Code 39

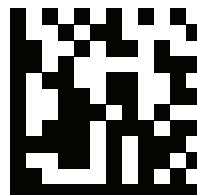

End

**Code 93**

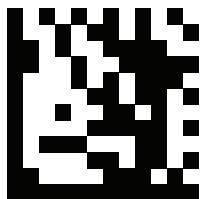


Set



Enable Code 93 (Default)




Disable Code 93

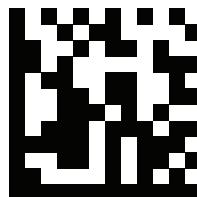

End

## **Code 32**

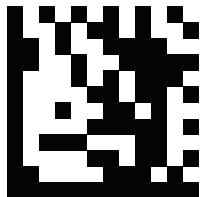


Set



Enable Code 32




Disable Code 32 (Default)

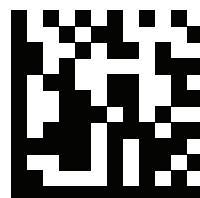


End

**Code 11**

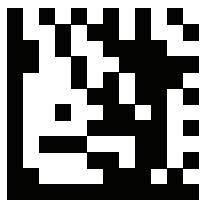


Set

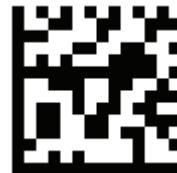

Enable Code 11




Disable Code 11 (Default)

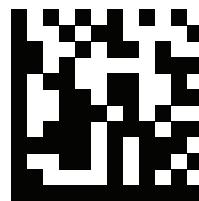

End

## *Codabar*

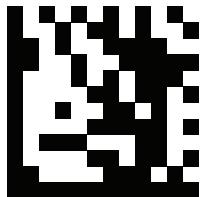


Set



Enable Codabar (Default)




Disable Codabar

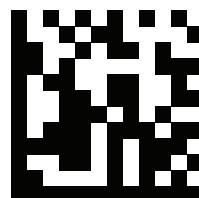

End

*Plessey*

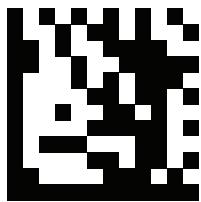


Set



Enable Plessey




Disable Plessey (Default)

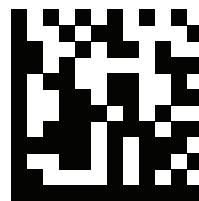

End

## ***MSI/Plessy***

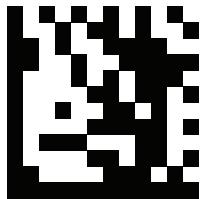


Set



Enable MSI/Plessy




Disable MSI/Plessy (Default)

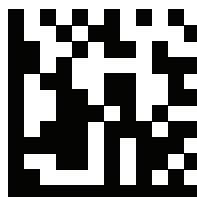

End

***Interleaved 2 of 5***

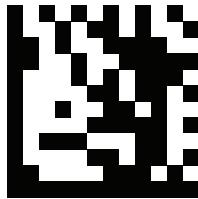


Set



Enable Interleaved 2 of 5 (Default)




Disable Interleaved 2 of 5

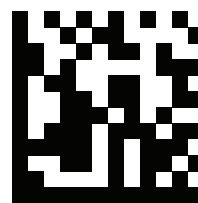

End

## **IATA 2 of 5**

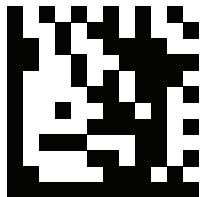


Set



Enable IATA 2 of 5




Disable IATA 2 of 5 (Default)

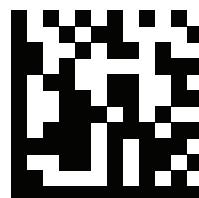

End

## ***Matrix 2 of 5***

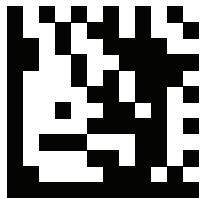


Set



Enable Matrix 2 of 5




Disable Matrix 2 of 5 (Default)

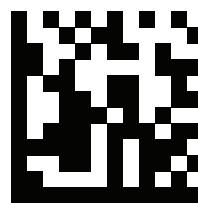

End

## ***Straight 2 of 5***

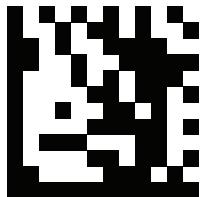


Set



Enable Straight 2 of 5




Disable Straight 2 of 5 (Default)

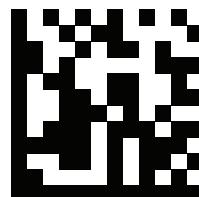

End

## RSS 14 (GS1 DATABAR 14)

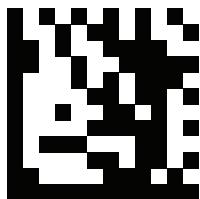


Set



Enable RSS 14 (GS1 DATABAR 14) (Default)




Disable RSS 14 (GS1 DATABAR 14)

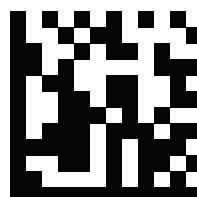

End

## **RSS Expanded (GS1 DataBar Expanded)**

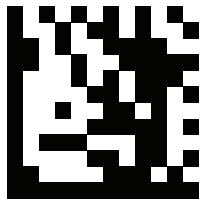


Set



Enable RSS Expanded (GS1 DataBar  
Expanded) (Default)




Disable RSS Expanded (GS1 DataBar  
Expanded)

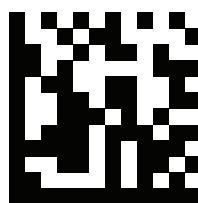

End

**RSS Limited (GS1 DataBar Limited)**

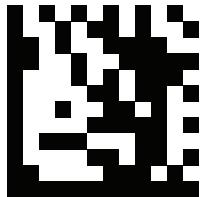


Set



Enable RSS Limited (GS1 DataBar Limited)  
(Default)




Disable RSS Limited (GS1 DataBar Limited)

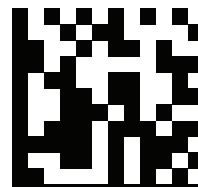

End

## **GS1-128 AIM ID**

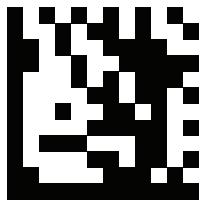


Set



Enable




Disable (Default)

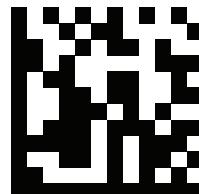

End

**GS1-2D AIM ID**

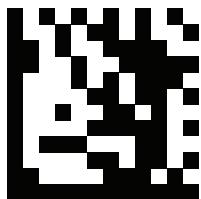


Set



Enable




Disable (Default)

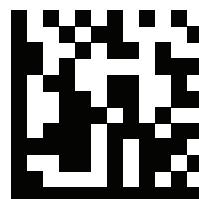

End

## ***Component CC-A***

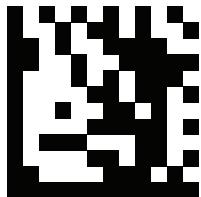


Set



Enable Component CC-A




Disable Component CC-A (Default)

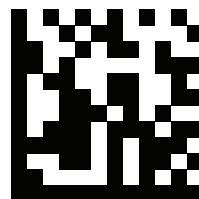

End

***Component CC-B***

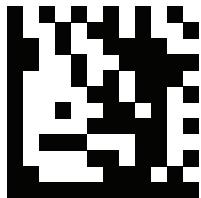


Set



Enable Component CC-B




Disable Component CC-B (Default)

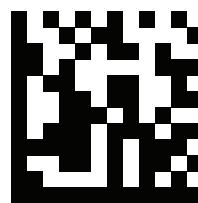

End

## ***Component CC-C***

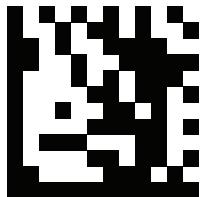


Set



Enable Component CC-C




Disable Component CC-C (Default)

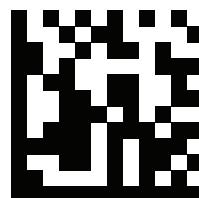

End

**PDF417**

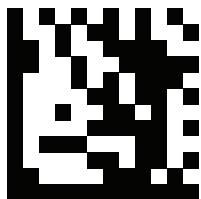


Set



Enable PDF417 (Default)




Disable PDF417

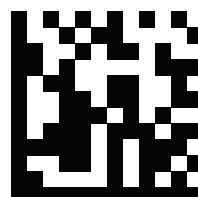

End

## Micro PDF417

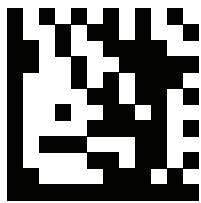


Set



Enable Micro PDF417 (Default)




Disable Micro PDF417

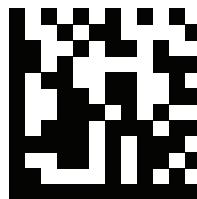

End

## Data Matrix

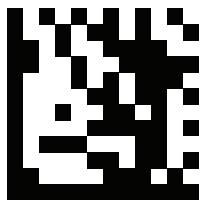


Set



Enable Data Matrix (Default)




Disable Data Matrix

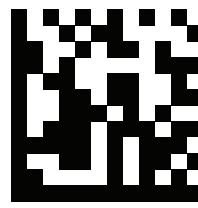


End

## **QR Code**

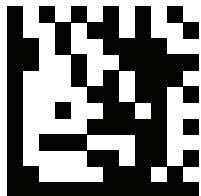


Set

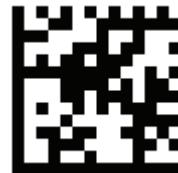

Enable QR Code (Default)




Disable QR Code

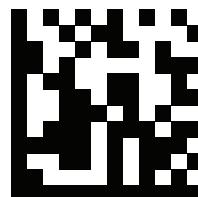

End

## *Micro QR Code*

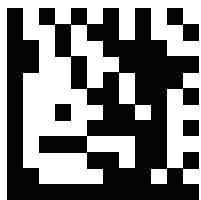


Set



Enable Micro QR Code (Default)




Disable Micro QR Code

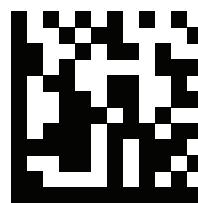

End

## Aztec

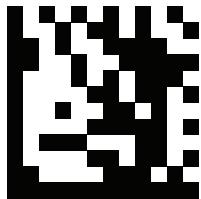


Set



Enable Aztec




Disable Aztec (Default)

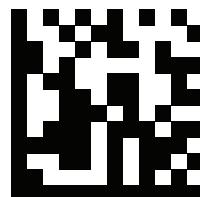

End

## ***MaxiCode***

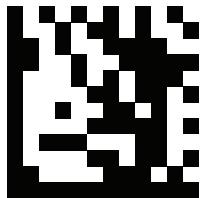


Set



Enable MaxiCode



Disable MaxiCode (Default)

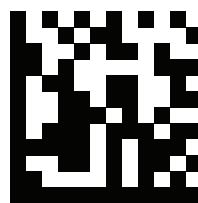


End

# Symbology Features

---

This section provides the programming barcodes for selecting features available to different symbologies.

## *UPC / EAN*

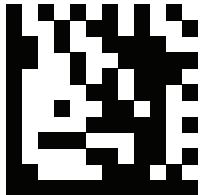


Set



Enable decoding of 2/5-digit supplemental  
code for UPC-A, UPC-E, EAN-13,  
and EAN-8




Disable decoding of 2/5-digit supplemental  
code for UPC-A, UPC-E, EAN-13,  
and EAN-8 (Default)

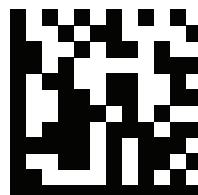


End


**UPC-A**

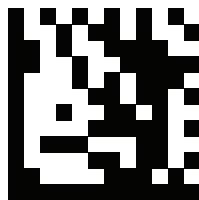


Set

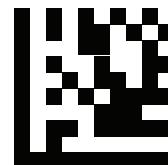


Enable UPC-A Number System digit  
(Default)

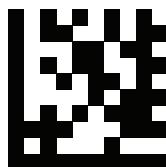


Disable UPC-A Number System digit

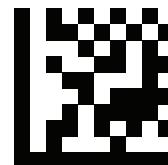


Enable UPC-A check digit (Default)

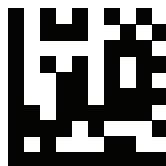


Disable UPC-A check digit

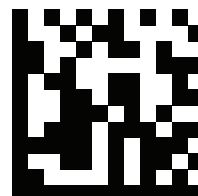


End

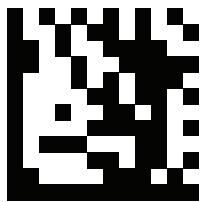


Set

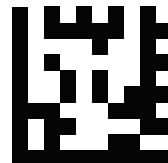

Enable conversion of UPC-A to EAN13

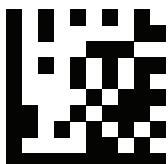


Disable conversion of UPC-A to EAN13  
(Default)

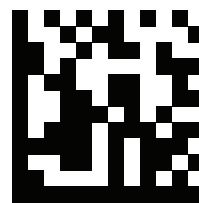


End


**UPC-E**

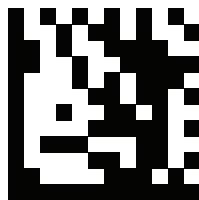


Set

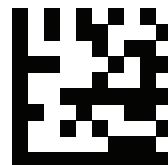


Enable UPC-E Number System digit  
(Default)

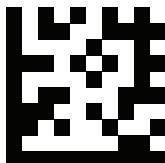


Disable UPC-E Number System digit

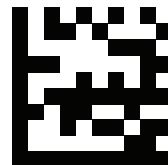


Enable UPC-E check digit (Default)

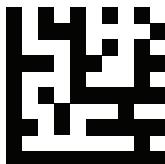


Disable UPC-E check digit

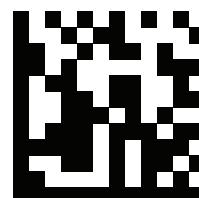


End

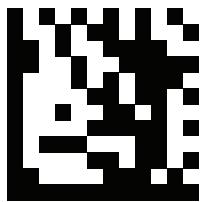


Set

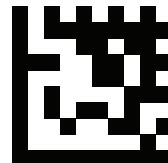

Enable conversion of UPC-E to UPC-A

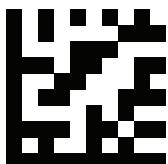


Disable conversion of UPC-E to UPC-A  
(Default)

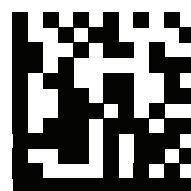


End


**EAN 8**

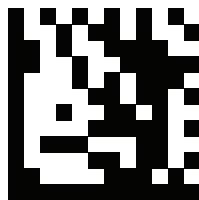


Set

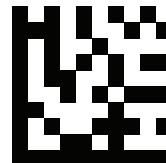


Enable EAN 8 check digit (Default)

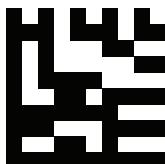


Disable EAN 8 check digit

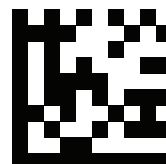

Enable conversion of EAN 8 to EAN 13

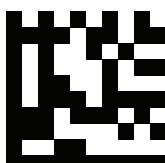


Disable conversion of EAN 8 to EAN 13  
(Default)

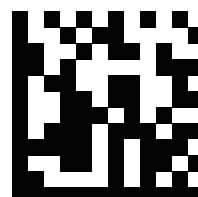


End


## EAN 13

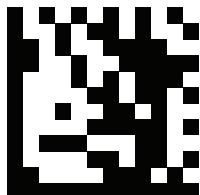


Set

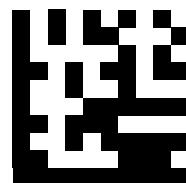


Enable EAN 13 check digit (Default)

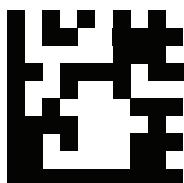


Disable EAN 13 check digit

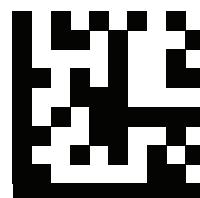


Enable conversion of EAN 13 to ISBN

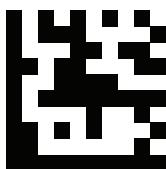


Disable conversion of EAN 13 to ISBN  
(Default)

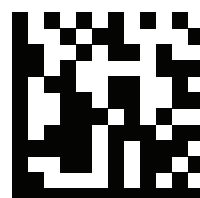


End

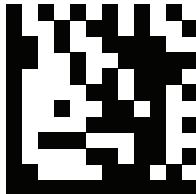


Set

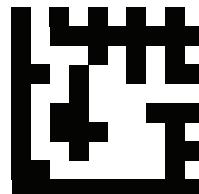

Enable conversion of EAN 13 to ISSN

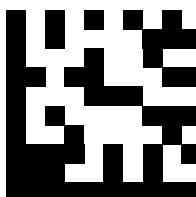


Disable conversion of EAN 13 to ISSN  
(Default)

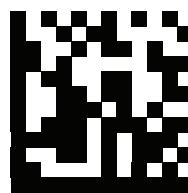


End


## EAN 13 Data Redundant Check

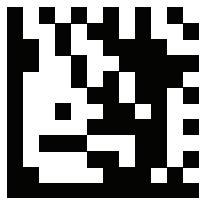


Set

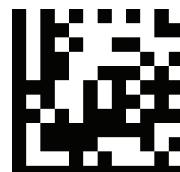

Off

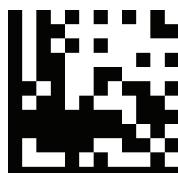


1 (Default)

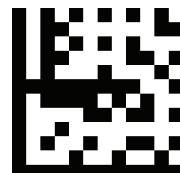

2




3

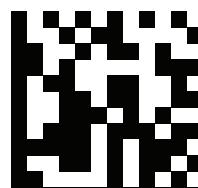


End

*JAN code for Books Separator*

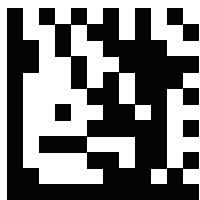

Set

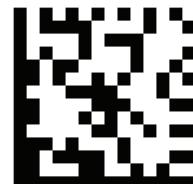


[TAB] key x 2




[SPACE] key x 3



[-] dash char

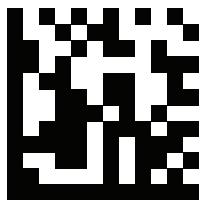

End

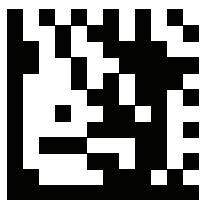

Set




Others char Separator

For parameters requiring specific numeric values, scan the [PROGRAMMING GUIDE\ASCII Code] appropriately numbered barcode(s)




None(Default)

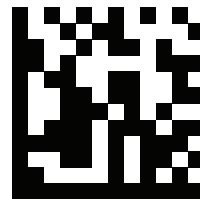


End


**Code 39**

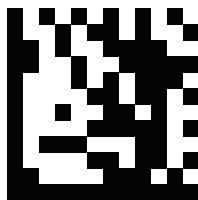


Set

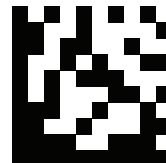


Enable Code 39 full ASCII mode

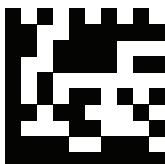


Disable Code 39 full ASCII mode (Default)

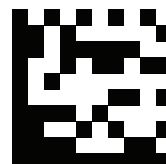


Enable Start and Stop characters

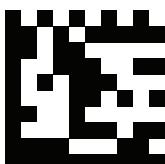


Disable Start and Stop characters (Default)

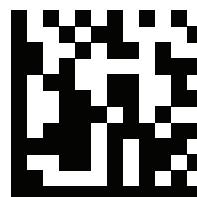


End

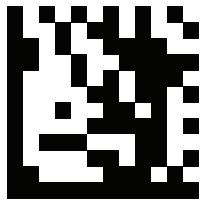


Set

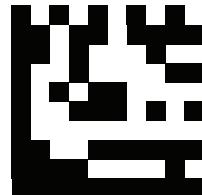


Disable Checksum (Default)

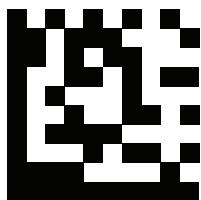

Enable checksum and send check  
character

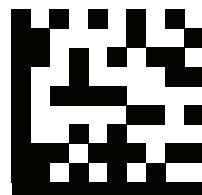


Enable checksum and strip check  
character

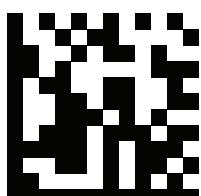

End

**Code 39 Redundant Check**

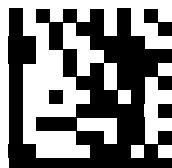

Set



Off




1 (Default)



2




3

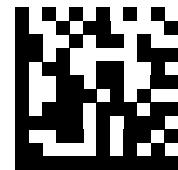


End


## **Code 32 (Italian Pharmacode)**

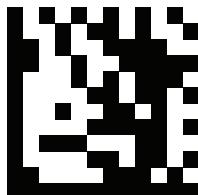


Set

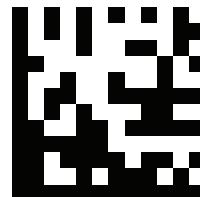

Transmit  
Alphabet "A" char

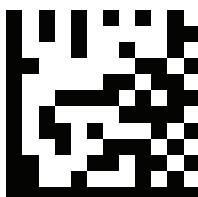


Disable Transmit  
Alphabet "A" char  
(Default)

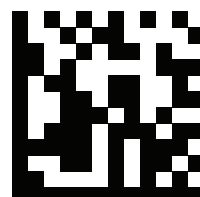


End


*Codabar*

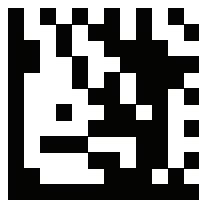


Set

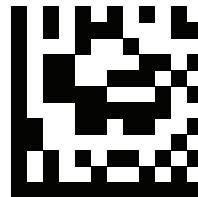


Disable Checksum (Default)

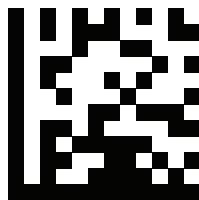


Enable checksum and send check  
character

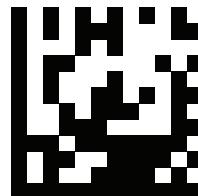


Enable checksum and strip check  
character

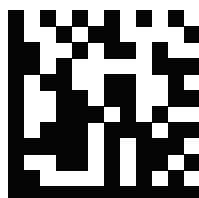


End

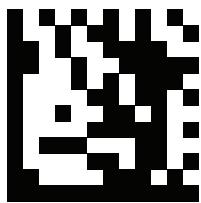


Set

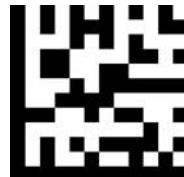

Strip Start/Stop characters

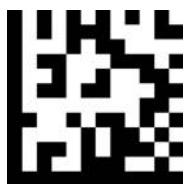


Output Start/Stop characters (Default)

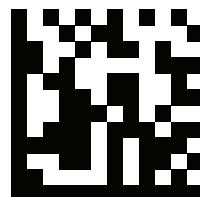


End


**Codabar Redundant Check**

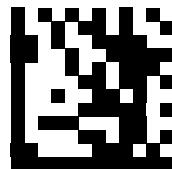

Set

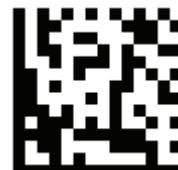


Off

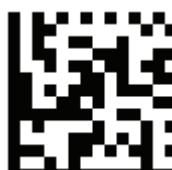


1 (Default)



2

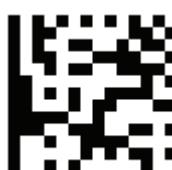


3

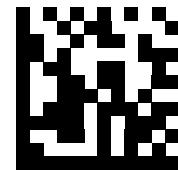


End


## ***Interleaved 2 of 5***

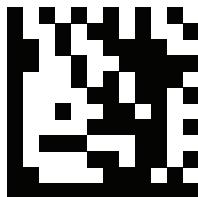


Set

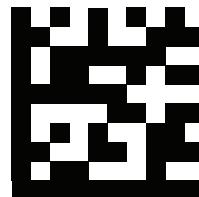


Disable Checksum (Default)

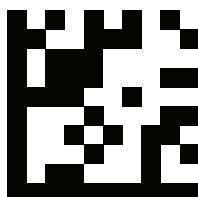


Enable checksum and send check  
character

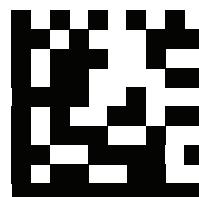


Enable checksum and strip check  
character

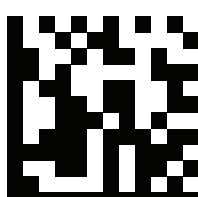


End

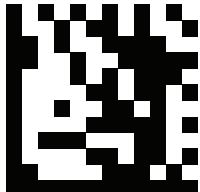


Set

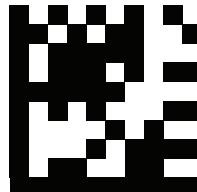

Default quiet zone checking  
No length checking performed (Default)

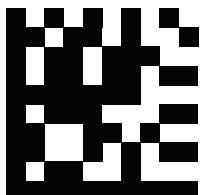


Smaller quiet zone allowed

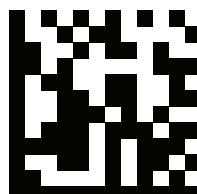


End


## ***MSI / Plessey***

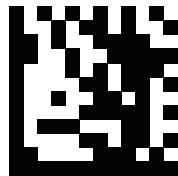


Set

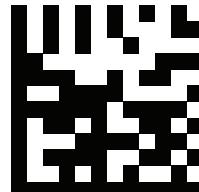


Disable MSI Plessey checksum

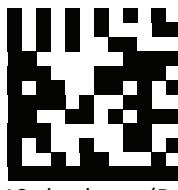


Mod 10 checksum (Default)

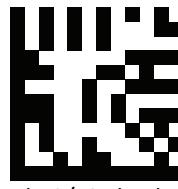


Mod 10/10 checksum

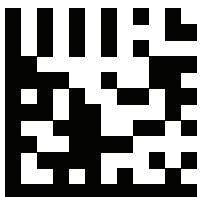


Mod 11/10 checksum

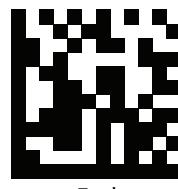


End

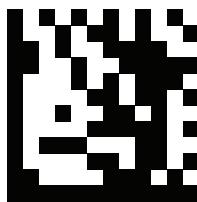


Set

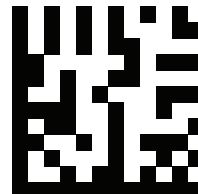

Output checksum character(s) (Default)

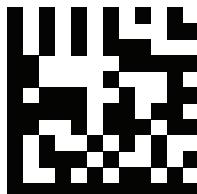


Strip checksum character(s)

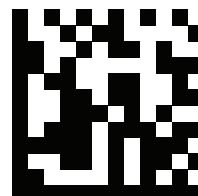


End


## **Code 11**

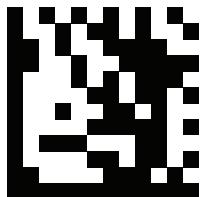

Set

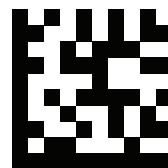


Output checksum character(s)

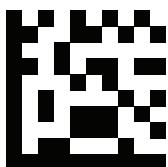


Strip checksum character(s) (Default)



Disable checksum checking

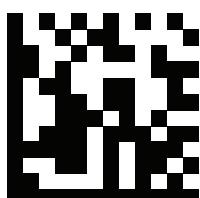


End

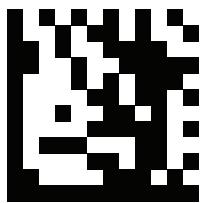


Set



Enable 1-digit checksum checking

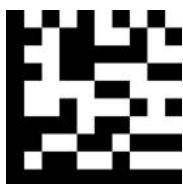


Enable 2-digit checksum checking  
(Default)

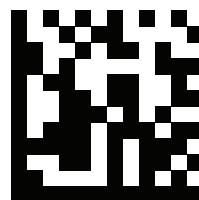


End


## **Data Matrix**

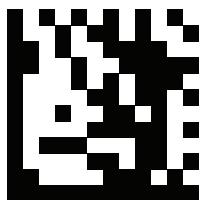


Set

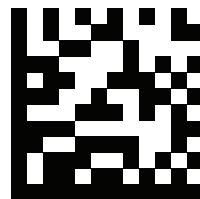


Enable mirror decoding (Default)

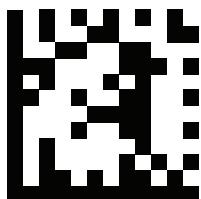

Disable mirror decoding

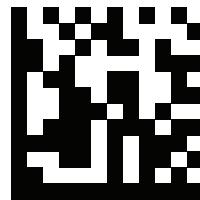


End

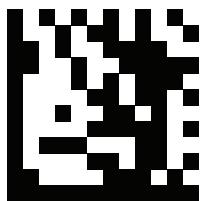


Set



Enable rectangular Data Matrix decoding

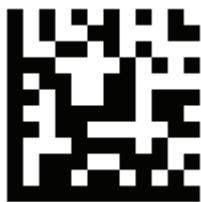


Disable rectangular Data Matrix decoding  
(Default)

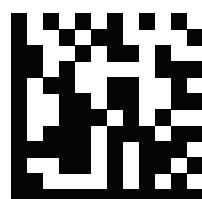


End


## *QR / Micro QR*

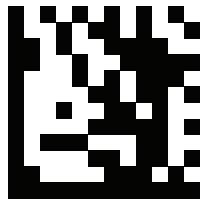


Set

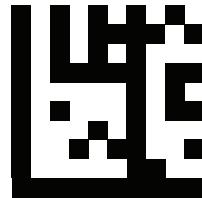


Enable mirror decoding (Default)

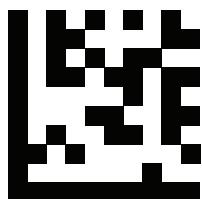

Disable mirror decoding

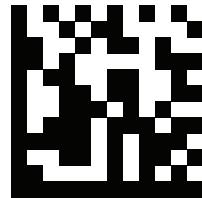

End

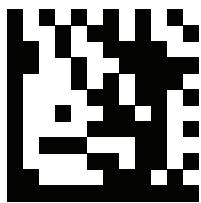


Set



UTF8 conversion for word only




Universal UTF8 conversion (Default)

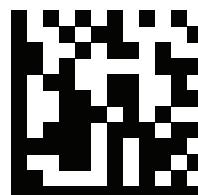


End

**Note:** Please install QR\_UTF8\_Conversion executable file before using this function.

## *Japanese Language Encoding Support*

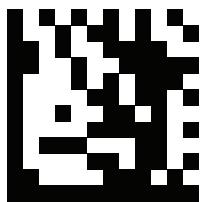


Set

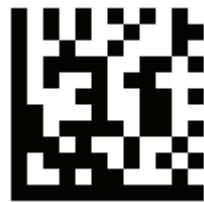

Enable




Disable (Default)

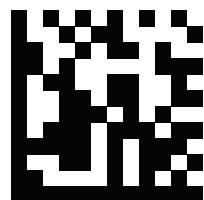


End


*Aztec*

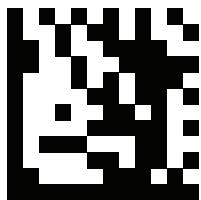


Set

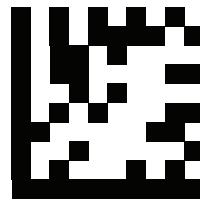

Enable mirror decoding (Default)

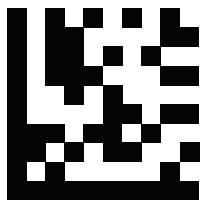


Disable mirror decoding

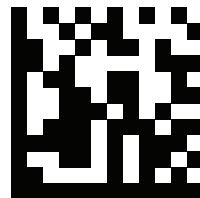

End

## ***GS1 DataBar 14 Stacked decoding***

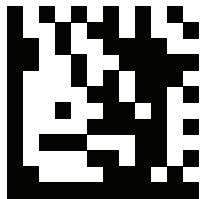


Set



Enable




Disable (Default)

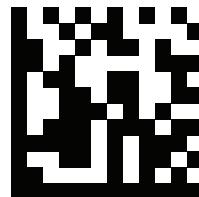

End


***GS1 DataBar Expanded Stacked decoding***

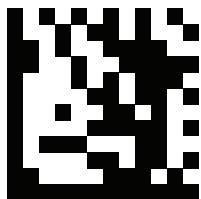


Set



Enable

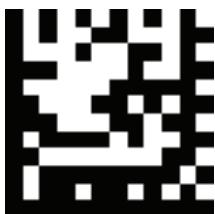

Disable (Default)

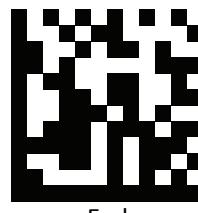

End

# Data Editing (Prefix)

---


Prefix is additional characters that can be sent before the scanned data. Please scan the barcodes in the selection below to set your prefix.

## ***Prefix Set Up Flow***


1. Scan Set.
2. Enable barcode type.
3. Scan prefix you would like to add characters within ASCII Table. Up to 4 digits can be added.
4. Scan End.

Ex. If we wish to add “3” as prefix for all barcode type, then follow procedure as below, Scan [Set] to enter setup. Then we select barcode by scanning [Enable All], then we scan [3] as 3 of ASCII HEX. At the end, we scan [End] to completed setup.


*All Prefix*

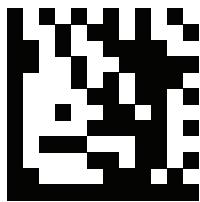


Set

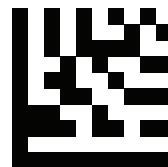

Enable All

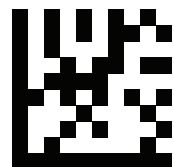


Disable All (Default)

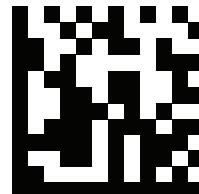


End


## ***UPC / EAN Prefix***

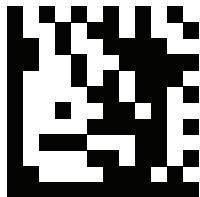


Set

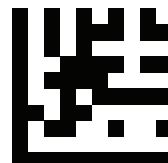


Enable UPC-A

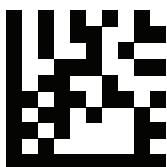


Disable UPC-A

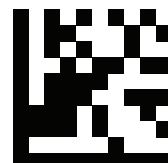


Enable UPC-E

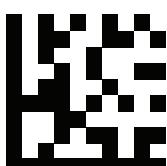


Disable UPC-E

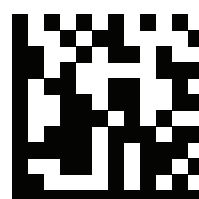


End

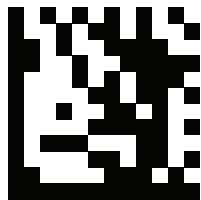


Set

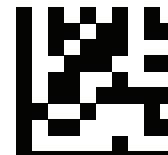


Enable EAN 8

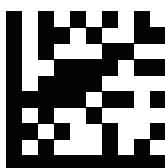


Disable EAN 8

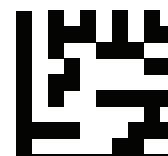

Enable EAN 13

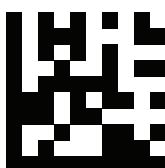


Disable EAN 13

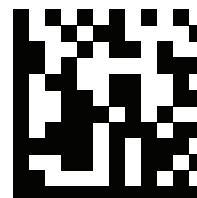


End


## ***Code 128 Prefix***

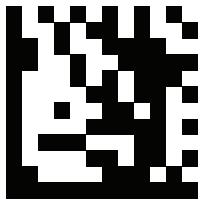


Set

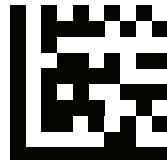

Enable Code 128

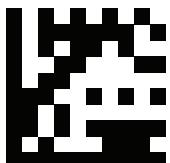


Disable Code 128

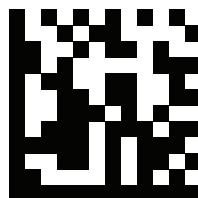


End


***Code 39 Prefix***

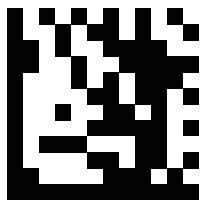


Set

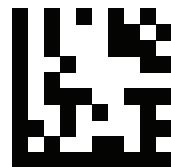

Enable Code 39

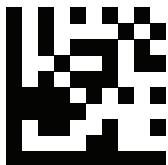


Disable Code 39

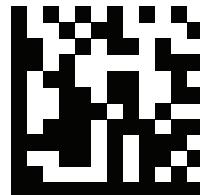


End


## ***Code 93 Prefix***

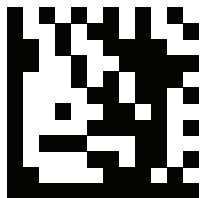


Set

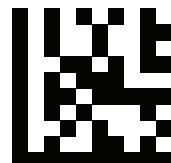

Enable Code 93

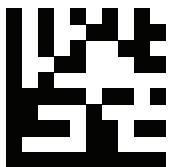


Disable Code 93

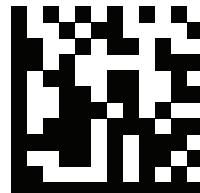


End


***Code 32 Prefix***

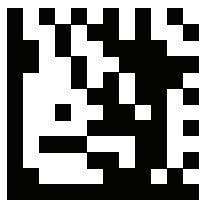


Set

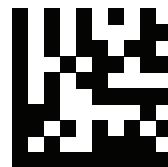

Enable Code 32

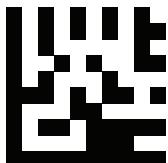


Disable Code 32

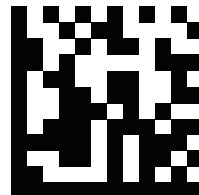


End


## ***Code 11 Prefix***

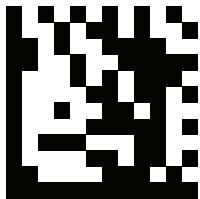


Set

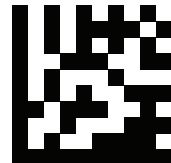

Enable Code 11

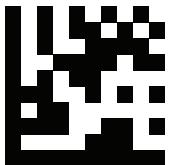


Disable Code 11

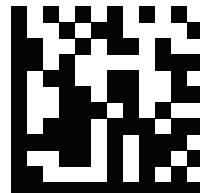


End


## Codabar Prefix

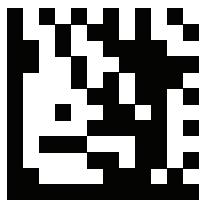


Set

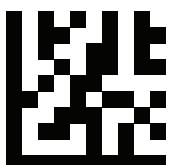

Disable Codabar

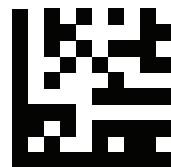


Enable Codabar

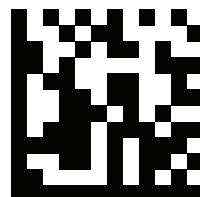


End


## **Plessey Prefix**

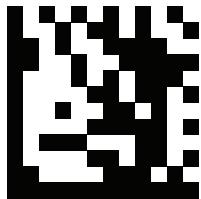


Set

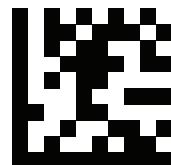

Enable Plessey

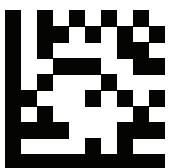


Disable Plessey

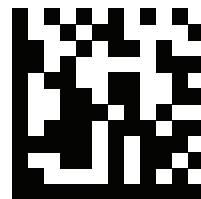


End


***MSI Prefix***

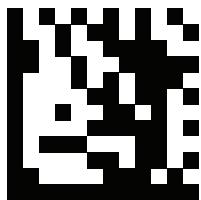


Set

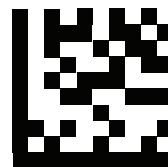

Enable MSI

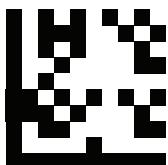


Disable MSI

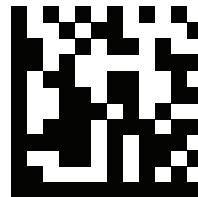


End


## ***Interleaved 2 of 5 Prefix***

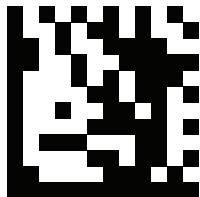


Set

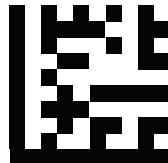

Enable Interleaved 2 of 5

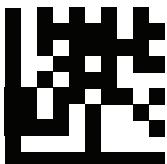


Disable Interleaved 2 of 5

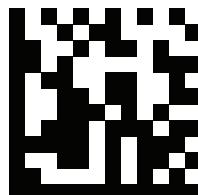


End


**IATA 2 of 5 Prefix**

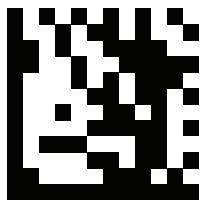


Set

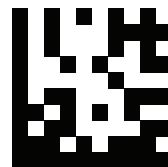

Enable IATA 2 of 5

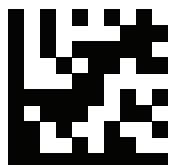


Disable IATA 2 of 5

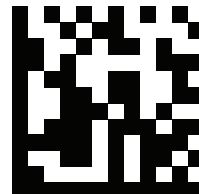


End


## ***Matrix 2 of 5 Prefix***

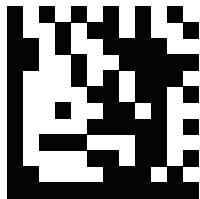


Set

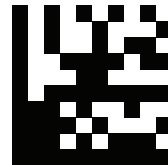

Enable Matrix 2 of 5

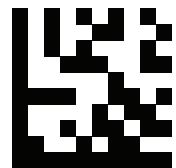


Disable Matrix 2 of 5

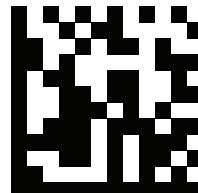


End


***Straight 2 of 5 Prefix***

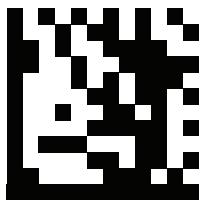


Set

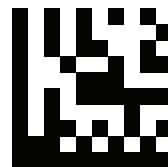

Enable Straight 2 of 5

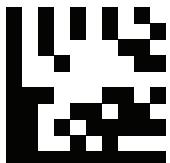


Disable Straight 2 of 5

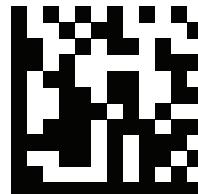


End


## **RSS 14 Prefix (GS1 DataBar 14 Prefix)**

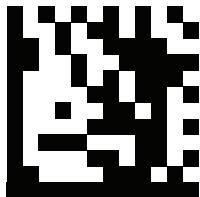


Set

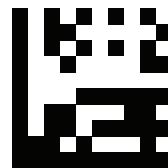

Enable RSS 14 Prefix  
(GS1 DataBar 14 Prefix)

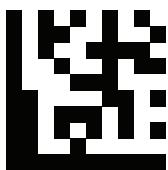


Disable RSS 14 Prefix  
(GS1 DataBar 14 Prefix)

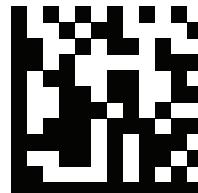


End


**RSS Expanded Prefix (GS1 DataBar Expanded Prefix)**

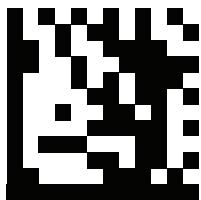


Set

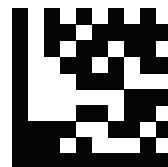

Enable RSS Expanded Prefix  
(GS1 DataBar Expanded Prefix)

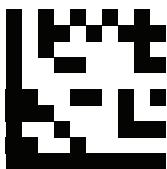


Disable RSS Expanded Prefix  
(GS1 DataBar Expanded Prefix)

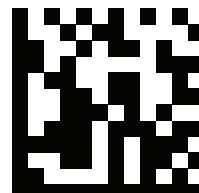


End


## **RSS Limited Prefix (GS1 DataBar Limited Prefix)**

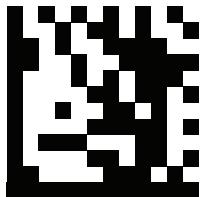


Set

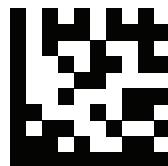

Enable RSS Limited Prefix  
(GS1 DataBar Limited Prefix)

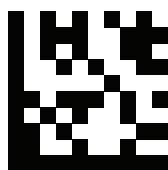


Disable RSS Limited Prefix  
(GS1 DataBar Limited Prefix)

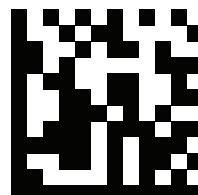


End


## *Component CC-A Prefix*

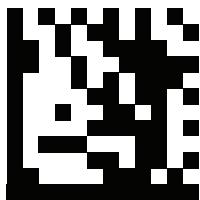


Set

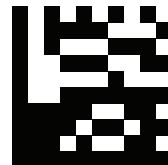

Enable Component CC-A

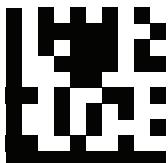


Disable Component CC-A

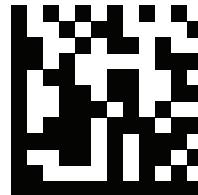


End


## **Component CC-B Prefix**

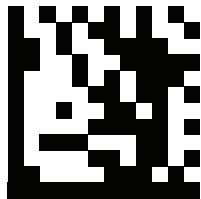


Set

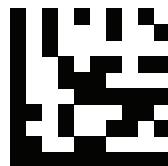

Enable Component CC-B

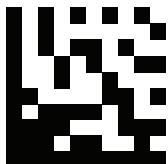


Disable Component CC-B

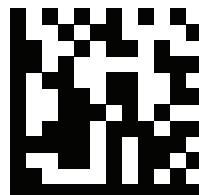


End


**Component CC-C Prefix**

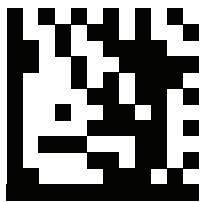


Set

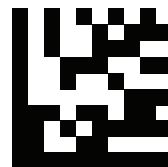

Enable Component CC-C

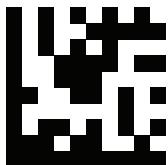


Disable Component CC-C

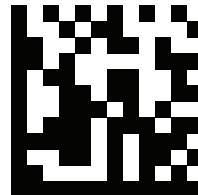


End


## **PDF 417 Prefix**

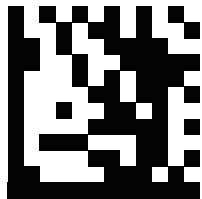


Set

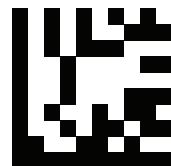

Enable PDF 417

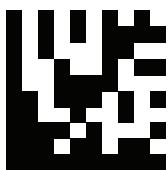


Disable PDF 417

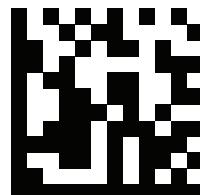


End


***Micro PDF 417 Prefix***

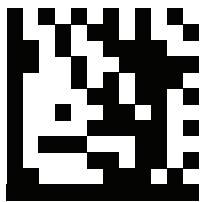


Set

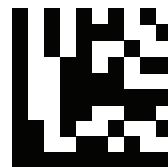

Enable Micro PDF 417

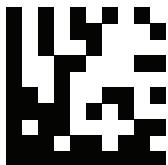


Disable Micro PDF 417

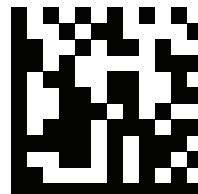


End


## ***Data Matrix Prefix***

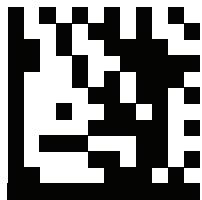


Set

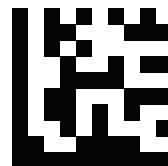

Enable Data Matrix

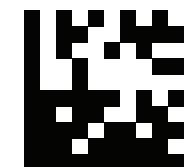


Disable Data Matrix

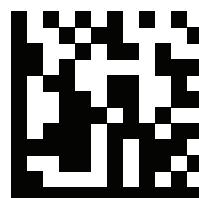


End


***QR Prefix***

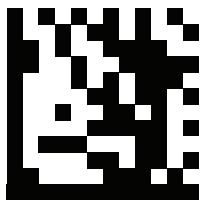


Set

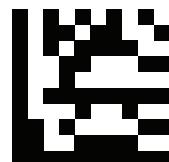

Enable QR Code

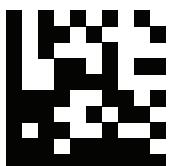


Disable QR Code

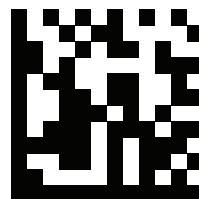


End


## ***Micro QR Prefix***

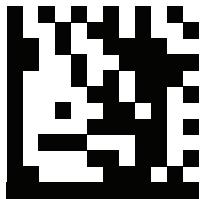


Set

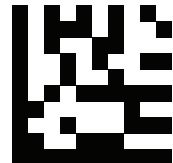

Enable Micro QR

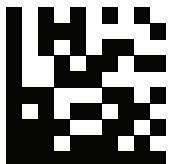


Disable Micro QR

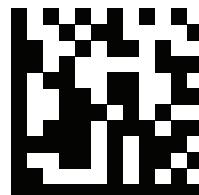


End


## Aztec Prefix

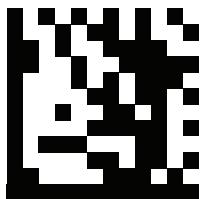


Set

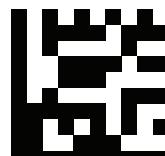

Enable Aztec

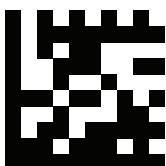


Disable Aztec

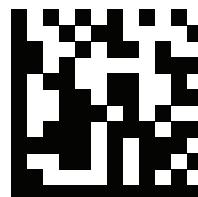


End


## ***MaxiCode Prefix***

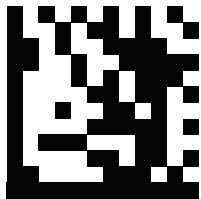


Set

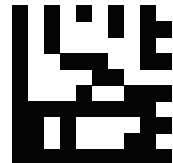

Enable MaxiCode

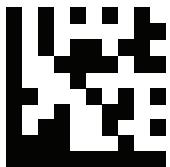

Disable MaxiCode

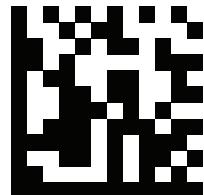

End

# Data Editing (Suffix)

---


Suffix is additional characters that can be sent after the scanned data. Please scan the barcodes in the selection below to set your suffix.

## ***Suffix Set Up Flow***


1. Scan Set.
2. Enable barcode type.
3. Scan suffix you would like to add characters within ASCII Table. Up to 4 digits can be added.
4. Scan End.

Ex. If we wish to add “36” as suffix for all barcode type, then follow procedure as below. Scan [Set] to enter setup. Then we select barcode by scanning [Enable All], then we scan [3] as 3 of ASCII HEX and [6] as 6.


## ***All Suffix***

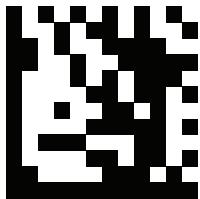


Set

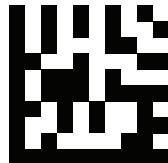

Enable All

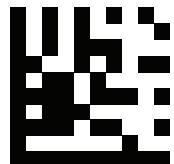


Disable All (Default)

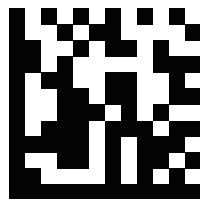


End


***UPC-A Suffix***

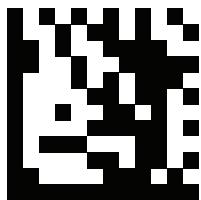


Set

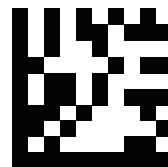

Enable UPC-A

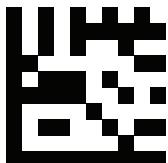


Disable UPC-A

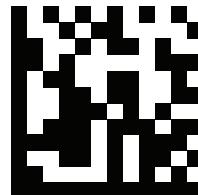


End


## ***UPC-E Suffix***

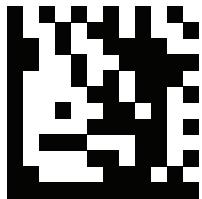


Set

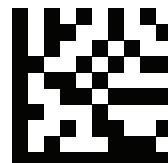

Enable UPC-E

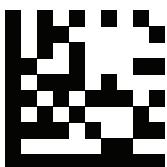


Disable UPC-E

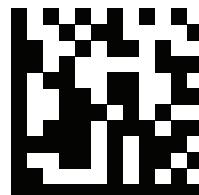


End


**EAN 8 Suffix**

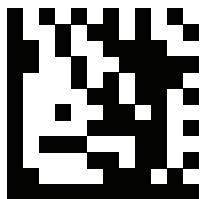


Set

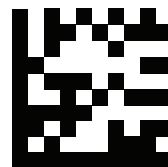

Enable EAN 8

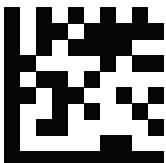


Disable EAN 8

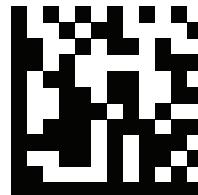

End


## **EAN 13 Suffix**

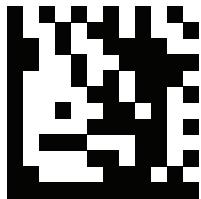


Set



Enable EAN 13

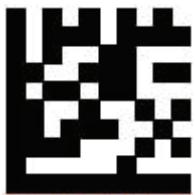


Disable EAN 13

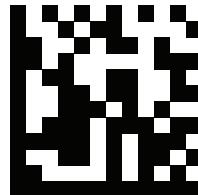


End


## *Code 128 Suffix*

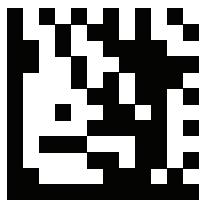


Set

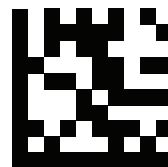

Enable Code 128

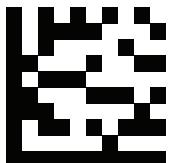


Disable Code 128

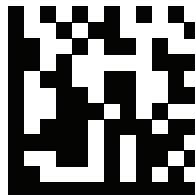


End


## **Code 39 Suffix**

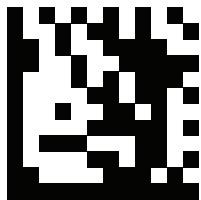


Set

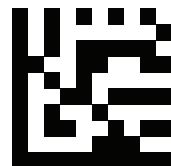

Enable Code 39

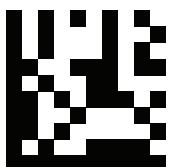


Disable Code 39

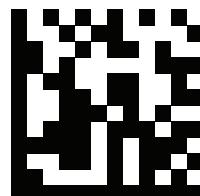


End


***Code 93 Suffix***

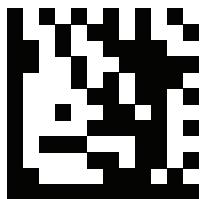


Set

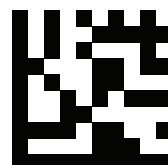

Enable Code 93

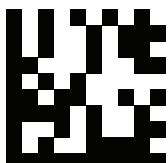


Disable Code 93

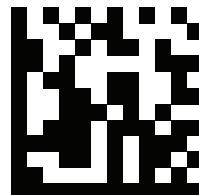


End


## **Code 32 Suffix**

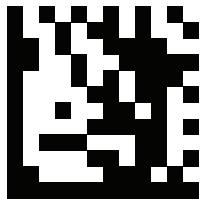


Set

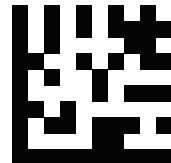

Enable Code 32

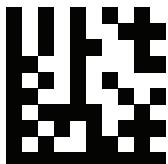


Disable Code 32

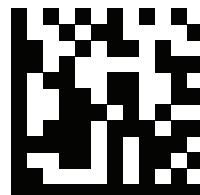


End


***Code 11 Suffix***

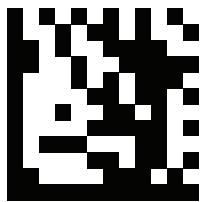


Set

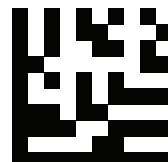

Enable Code 11

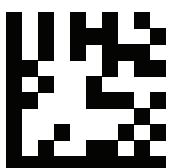


Disable Code 11

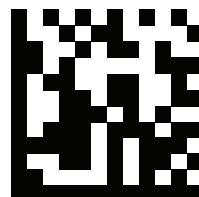


End


## *Codabar Suffix*

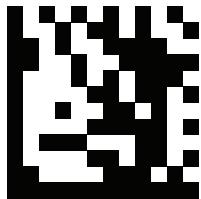


Set

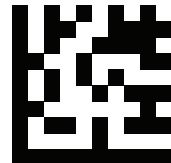

Enable Codabar

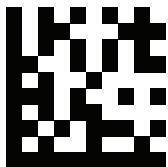


Disable Codabar

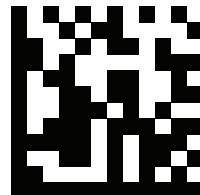


End


*Plessey Suffix*

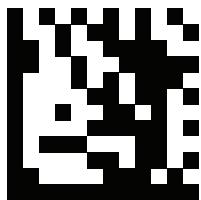


Set

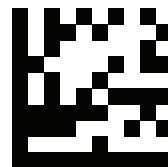

Enable Plessey

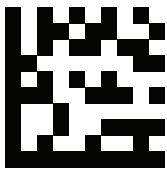


Disable Plessey

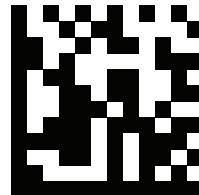


End


## ***MSI Suffix***

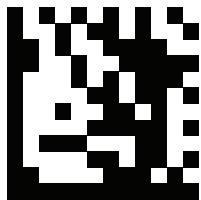


Set

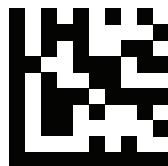

Enable MSI

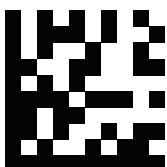


Disable MSI

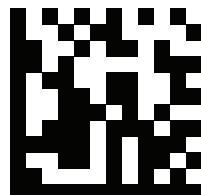


End


***Interleaved 2 of 5 Suffix***

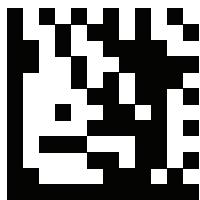


Set

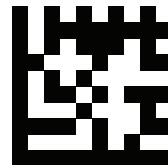

Enable Interleaved 2 of 5

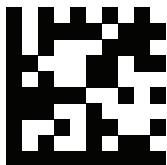


Disable Interleaved 2 of 5

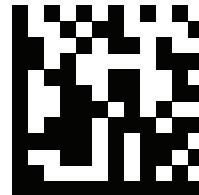


End


## **IATA 2 of 5 Suffix**

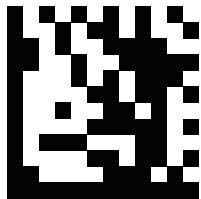


Set

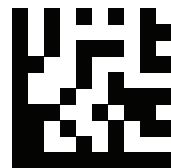

Enable IATA 2 of 5

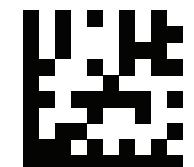


Disable IATA 2 of 5

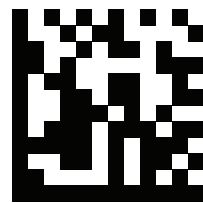


End


***Matrix 2 of 5 Suffix***

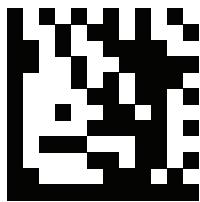


Set

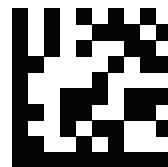

Enable Matrix 2 of 5

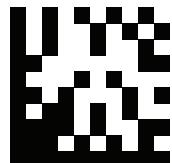


Disable Matrix 2 of 5

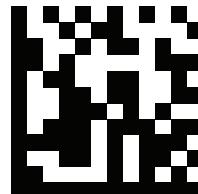


End


## ***Straight 2 of 5 Suffix***

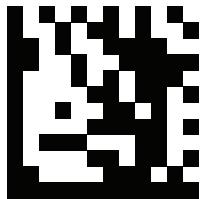


Set

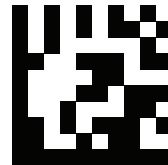

Enable Straight 2 of 5

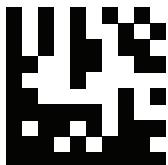


Disable Straight 2 of 5

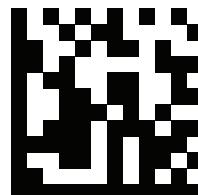


End


**RSS 14 Suffix (GS1 DataBar 14 Suffix)**

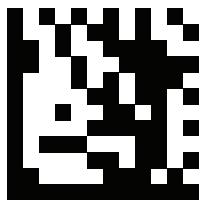


Set

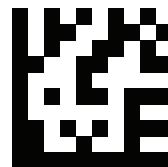

Enable RSS 14 Suffix  
(GS1 DataBar 14 Suffix)

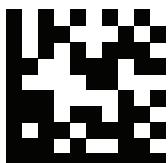


Disable RSS 14  
Suffix (GS1 DataBar 14 Suffix)

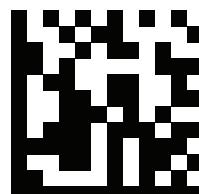


End


## **RSS Expanded Suffix (GS1 DataBar Expanded Suffix)**

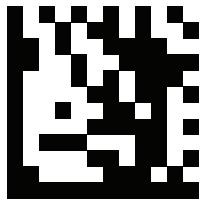


Set

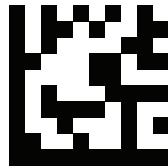

Enable RSS Expanded  
Suffix (GS1 DataBar Expanded Suffix)

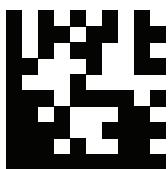


Disable RSS Expanded  
Suffix (GS1 DataBar Expanded Suffix)

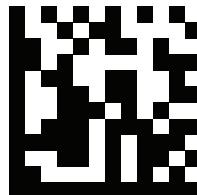


End


**RSS Limited Suffix (GS1 DataBar Limited Suffix)**

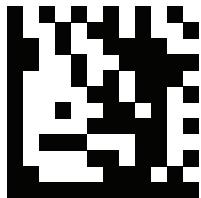


Set

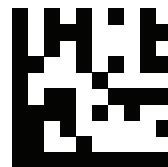

Enable RSS Limited  
Suffix (GS1 DataBar Limited Suffix)

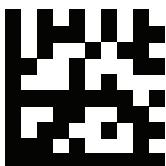


Disable RSS Limited  
Suffix (GS1 DataBar Limited Suffix)

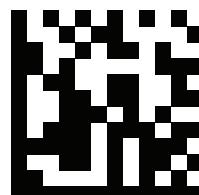


End


## **Component CC-A Suffix**

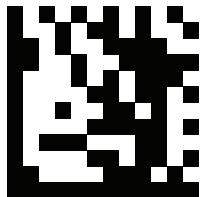


Set

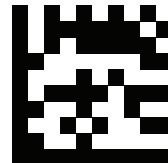

Enable Component CC-A

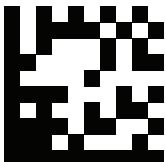


Disable Component CC-A

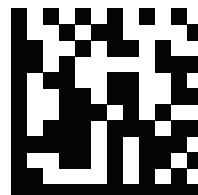


End


**Component CC-B Suffix**

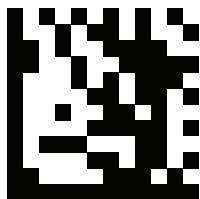


Set

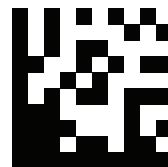

Enable Component CC-B

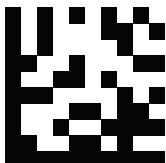


Disable Component CC-B

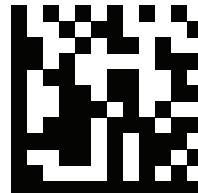


End


## ***Component CC-C Suffix***

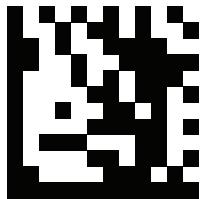


Set

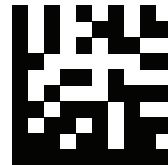

Enable Component CC-C

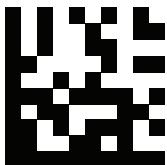


Disable Component CC-C

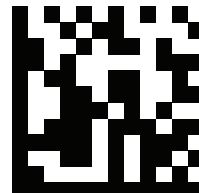


End


**PDF-417 Suffix**

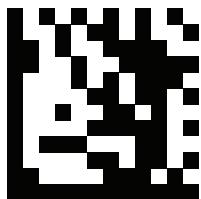


Set

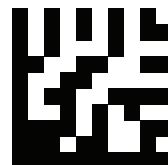

Enable PDF417

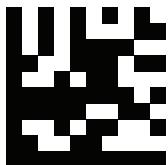


Disable PDF417

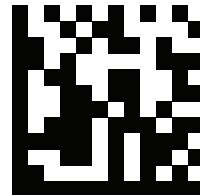


End


## ***Micro PDF-417 Suffix***

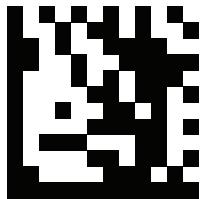


Set

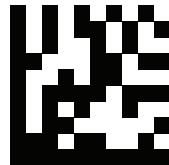

Enable Micro PDF417

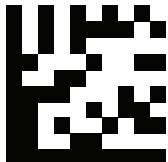


Disable Micro PDF417

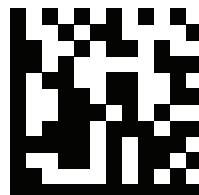


End


## Data Matrix Suffix

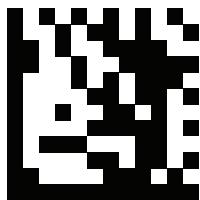


Set

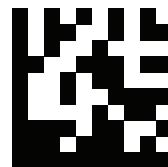

Data Matrix Enable

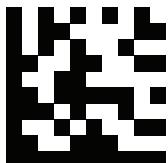


Data Matrix Disable

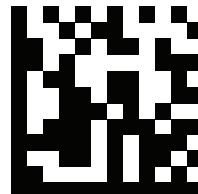


End


## ***QR Code Suffix***

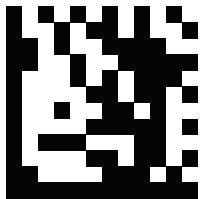


Set

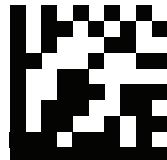

QR Code Enable

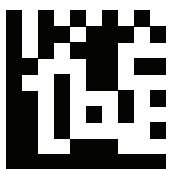


QR Code Disable

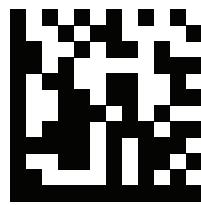


End


## ***Micro QR Suffix***

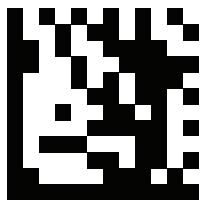


Set

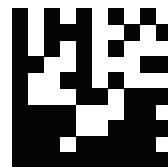

Micro QR Enable

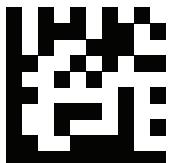


Micro QR Disable

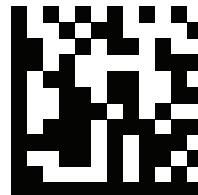


End


## *Aztec Suffix*

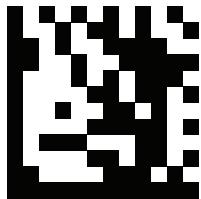


Set

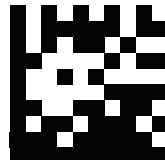

Aztec Enable

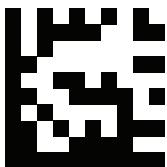


Aztec Disable

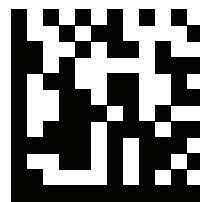


End


## *MaxiCode Suffix*

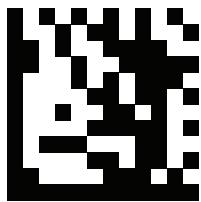


Set

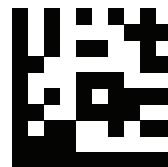

MaxiCode Enable

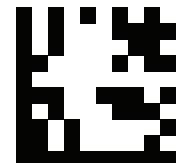

MaxiCode Disable

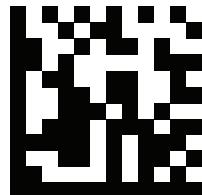

End

# Data Editing (Truncate/Return)

---


## *Truncate/Return Commands*

1. Return the leftmost characters: Specify the number of leftmost characters you want returned.
2. Truncate the leftmost characters: Specify the number of leftmost characters you want deleted.
3. Return the Rightmost characters: Specify the number of rightmost characters you want returned.
4. Truncate the Rightmost characters: Specify the number of rightmost characters you want deleted.
5. Return the Middle characters: Returns the middle characters. The middle is found by scanning from left to right, and parameters determine where the middle begins and ends
6. Truncate the Middle characters: Delete the middle characters. The middle is found by scanning from left to right, and parameters determine where the middle begins and ends

## ***Set Up Flow***

1. Scan Set to set up.
2. Enable barcode type.
3. Scan one of Truncate/Return Command.
4. Select lengths using the numeric bar codes in ASCII Code Table.
5. Scan End.

***Set All Symbologies Truncate/Return***

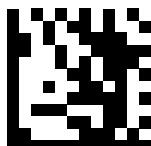

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

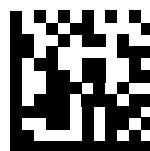

End

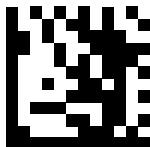

Set




Return middle



Truncate middle




Disable All (Default)

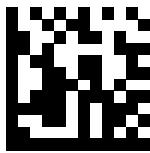

End

*Set UPC-A Truncate/Return*

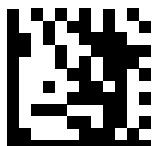

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

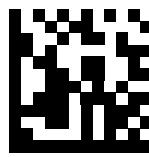

End

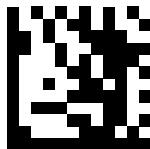

Set




Return middle



Truncate middle




Disable (Default)

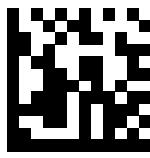

End

***Set UPC-E Truncate/Return***

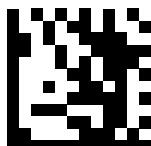

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

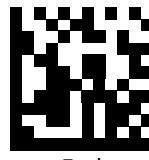

End

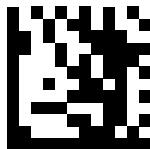

Set




Return middle



Truncate middle




Disable (Default)

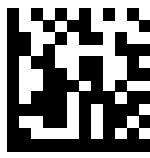

End

***Set EAN-8 Truncate/Return***

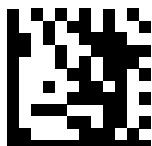

Set



Return leftmost




Truncate leftmost



Return rightmost



Truncate rightmost

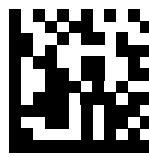

End



Set




Return middle



Truncate middle



Disable (Default)

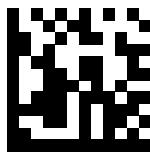

End

***Set EAN 13 Truncate/Return***



Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

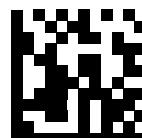

End

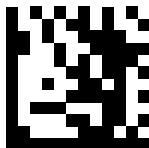

Set




Return middle



Truncate middle



Disable (Default)

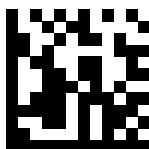

End

***Set Code 128 Truncate/Return***



Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

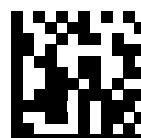

End

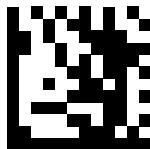

Set




Return middle



Truncate middle




Disable (Default)

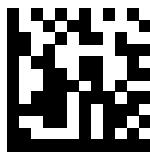

End

***Set Code 39 Truncate/Return***

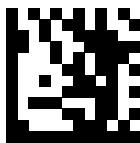

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

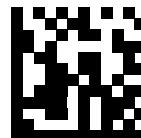

End

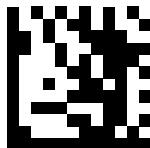

Set




Return middle



Truncate middle



Disable (Default)

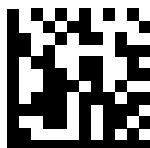

End

***Set Code 93 Truncate/Return***



Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

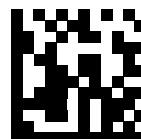

End

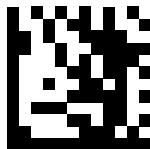

Set




Return middle



Truncate middle




Disable (Default)

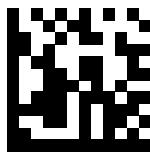

End

***Set Code 32 Truncate/Return***

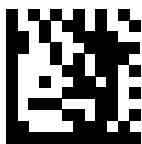

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

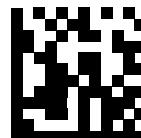

End

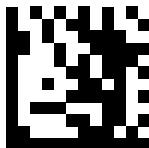

Set




Return middle



Truncate middle




Disable (Default)

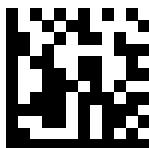

End

***Set Code 11 Truncate/Return***

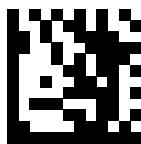

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

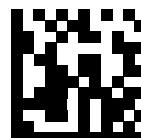

End

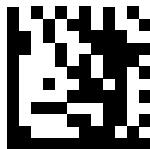

Set




Return middle



Truncate middle



Disable (Default)

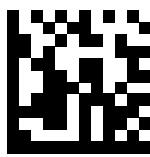

End

***Set Codabar Truncate/Return***



Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

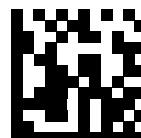

End

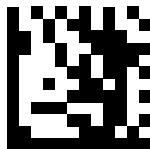

Set




Return middle



Truncate middle




Disable (Default)

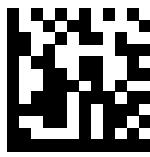

End

***Set Plessey Truncate/Return***

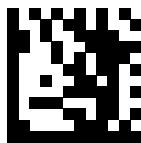

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

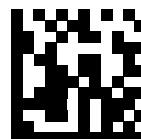

End

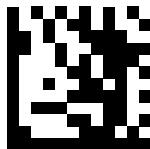

Set




Return middle



Truncate middle



Disable (Default)

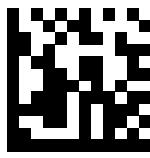

End

***Set MSI (Modified Plessy) Truncate/Return***



Set



Return leftmost




Truncate leftmost



Return rightmost



Truncate rightmost

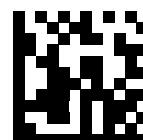

End



Set




Return middle



Truncate middle




Disable (Default)

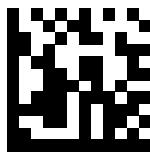

End

***Set Interleaved 2 of 5 Truncate/Return***

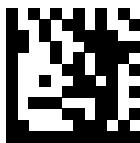

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

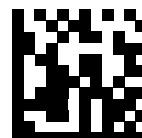

End

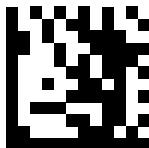

Set




Return middle



Truncate middle




Disable (Default)

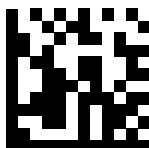

End

*Set IATA 2 of 5 Truncate/Return*

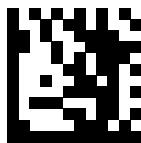

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

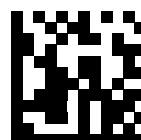

End

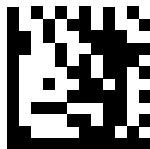

Set




Return middle



Truncate middle



Disable (Default)

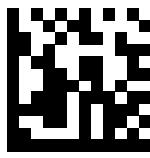

End

***Set Matrix 2 of 5 Truncate/Return***



Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

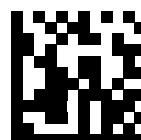

End

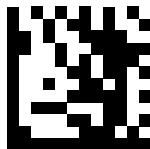

Set




Return middle



Truncate middle



Disable (Default)

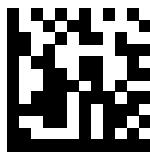

End

***Set Straight 2 of 5 Truncate/Return***



Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

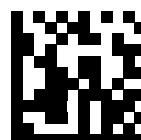

End

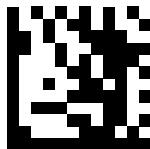

Set




Return middle



Truncate middle



Disable (Default)

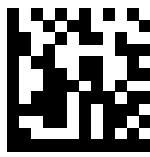

End

***Set RSS 14 (GS1 DataBar) Truncate/Return***



Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

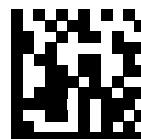

End

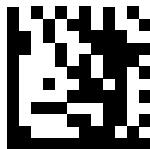

Set




Return middle



Truncate middle



Disable (Default)

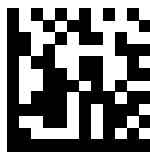

End

***Set RSS Expanded (GS1 DataBar Expanded) Truncate/Return***



Set



Return leftmost




Truncate leftmost



Return rightmost



Truncate rightmost

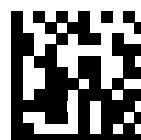

End



Set




Return middle



Truncate middle




Disable (Default)

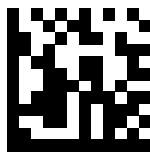

End

***Set RSS Limited (GS1 DataBar Limited) Truncate/Return***

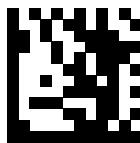

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

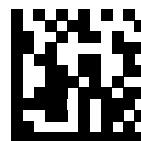

End

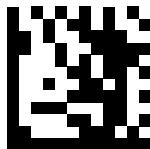

Set




Return middle



Truncate middle



Disable (Default)

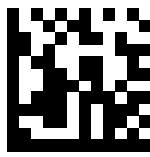

End

*Set Component CC-A Truncate/Return*



Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

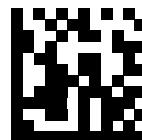

End

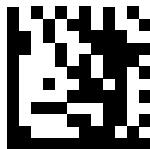

Set




Return middle



Truncate middle



Disable (Default)

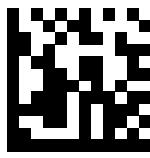

End

*Set Component CC-B Truncate/Return*



Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

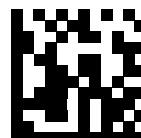

End

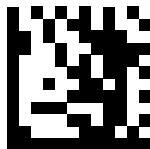

Set




Return middle



Truncate middle



Disable (Default)

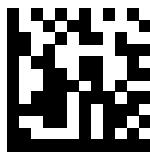

End

*Set Component CC-C Truncate/Return*



Set



Return leftmost




Truncate leftmost



Return rightmost



Truncate rightmost

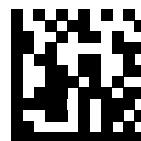

End



Set




Return middle



Truncate middle




Disable (Default)

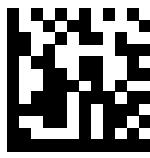

End

***Set PDF 417 Truncate/Return***

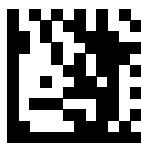

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

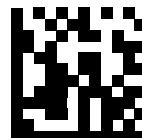

End

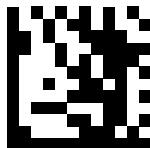

Set




Return middle



Truncate middle



Disable (Default)

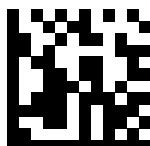

End

***Set Micro PDF 417 Truncate/Return***



Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

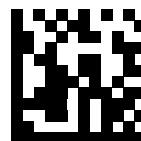

End

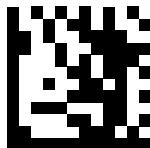

Set




Return middle



Truncate middle




Disable (Default)

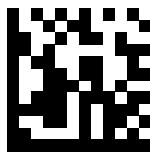

End

***Set Data Matrix Truncate/Return***

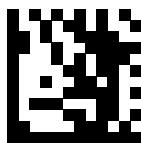

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

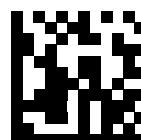

End

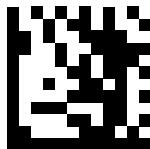

Set




Return middle



Truncate middle




Disable (Default)

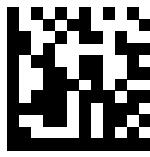

End

***Set QR Truncate/Return***

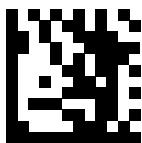

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

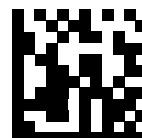

End

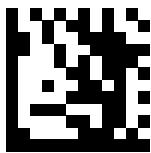

Set




Return middle



Truncate middle




Disable (Default)

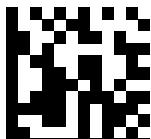

End

*Set Micro QR Truncate/Return*

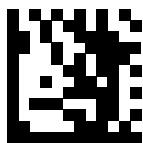

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

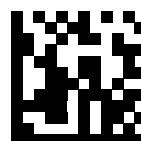

End

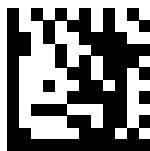

Set




Return middle



Truncate middle



Disable (Default)

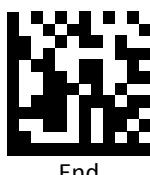

End

***Set Aztec Truncate/Return***



Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

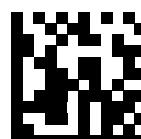

End

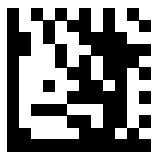

Set




Return middle



Truncate middle



Disable (Default)

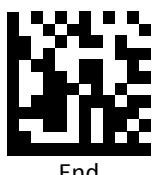

End

***Set MaxiCode Truncate/Return***



Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

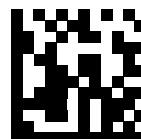

End

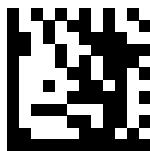

Set




Return middle



Truncate middle



Disable (Default)

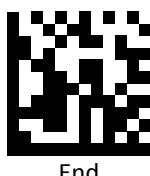

End

# Code Settings

---

## ***Set Lengths for Codes***

- One Discrete Length

Select this option to decode the symbol containing a selected length.  
Select the length using the numeric bar codes in ASCII Code Table.

Example 1:

To decode Interleaved 2 of 5 symbols with 8 characters:

- a. scan Set to set up
- b. scan Interleaved 2 of 5 One Discrete Length
- c. scan 8 in ASCII Code Table
- d. scan End to confirm the setup

Example 2:

To decode Interleaved 2 of 5 symbols with 12 characters:

- a. scan Set to set up
- b. scan Interleaved 2 of 5 One Discrete Length
- c. scan scan 1 followed by 2 in ASCII Code Table
- d. scan End to confirm the setup

- Two Discrete Lengths

Select this option to decode the symbol containing either of two selected lengths.  
Select lengths using the numeric bar codes in ASCII Code Table.

Example:

To decode Code 128 symbols containing either 8 or 14 characters

- a. scan Set to set up
- b. scan Code 128 Two Discrete Length
- c. scan 0, 8, 1, and then 4 in ASCII Code Table
- d. scan End to confirm the setup

- Length Within Range

Select this option to decode the symbol with a specific length range.

Select lengths using numeric bar codes in ASCII Code Table.

Example:

To decode Codabar symbols containing between 7 and 8 characters,

- a. scan Set to set up
- b. scan Codabar Length Within Range
- c. scan 0, 7, 0, and then 8 in ASCII Code Table
- d. scan End to confirm the setup

- Any Length


Select this option to decode the symbol containing any number of characters

within the digital scanner's capability.

Example:

- a. scan Set to set up
- b. scan Matrix 2 of 5 Any Length
- c. scan End to confirm the setup

***Set Lengths for Code 128***

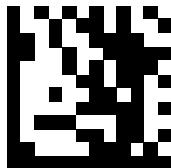

Set



One Discrete Length




Two Discrete Lengths



Length Within Range




Any Length (Default)

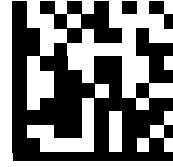

End

## ***Set Lengths for Code 39***

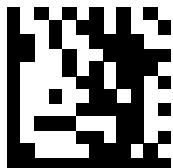

Set



One Discrete Length




Two Discrete Lengths



Length Within Range




Any Length (Default)

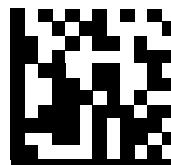

End

***Set Lengths for Code 93***

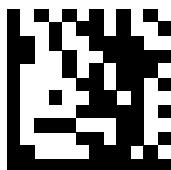


Set



One Discrete Length




Two Discrete Lengths

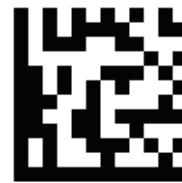

Length Within Range




Any Length (Default)

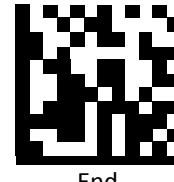


End

## *Set Lengths for Codabar*

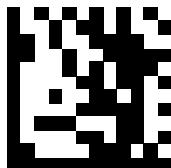

Set

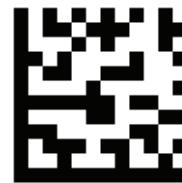

One Discrete Length




Two Discrete Lengths



Length Within Range




Any Length (Default)

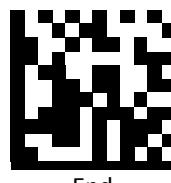

End

***Set Lengths for Interleaved 2 of 5***

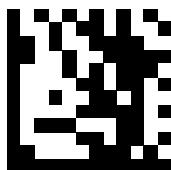

Set



One Discrete Length




Two Discrete Lengths



Length Within Range




Any Length (Default)

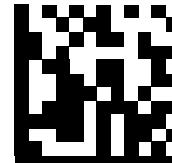

End

## ***Set Lengths for Code 11***

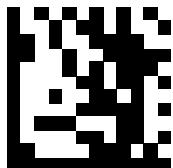

Set



One Discrete Length




Two Discrete Lengths



Length Within Range




Any Length (Default)

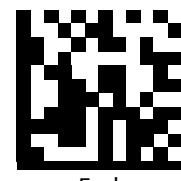


End

***Set Lengths for MSI***

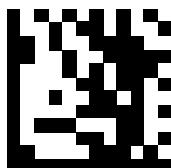

Set

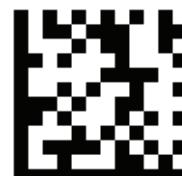

One Discrete Length




Two Discrete Lengths



Length Within Range




Any Length (Default)

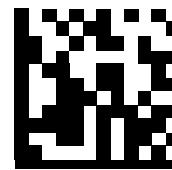

End

## ***Set Lengths for Matrix 2 of 5***

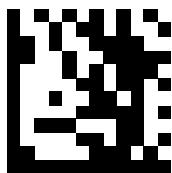

Set




One Discrete Length




Two Discrete Lengths



Length Within Range

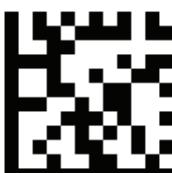


Any Length (Default)

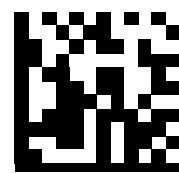

End

## ***Code Identifiers***

Scan the following barcodes to set symbology Identifiers.

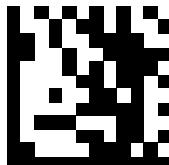


Set




Disable Code ID (Default)



Enable factory standard ID

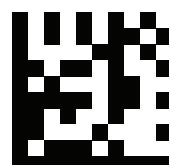

Enable AIM ID

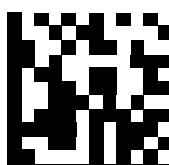


End

## **Code Identifiers Table**


<b>Symbology</b>	<b>Factory Standard</b>	<b>AIM</b>
UPC-A	A	]E
UPC-E	E	]E
EAN 8	FF	]E
EAN 13	F	]E
Code 128	K	]C
Code 39	M	]A
Code 93	L	]G
Code 32	M	]X
Code 11	O	]H
Codabar	N	]F
Plessey	P	]P
MSI / Plessey	a	]M
Interleaved 2 of 5	I	]I
IATA 2 of 5	Z	]R
Matrix 2 of 5	G	]X
Straight 2 of 5	S	]S
Pharmacode	H	]X
RSS 14 (GS1 DATABAR 14)	RS	]e
RSS Expanded (GS1 DataBar Expanded)	RX	]e
RSS Limited (GS1 DataBar Limited)	RL	]e
Component CC-A	m	]e
Component CC-B	n	]e
Component CC-C	i	]e
PDF417	r	]L
Micro PDF417	s	]L
Data Matrix	t	]d
QR	u	]Q
Micro QR	j	]Q
Aztec	e	]Z
MaxiCode	v	]U

## Keyboard Caps Lock State

Scan a barcode below to turn Caps on or off.

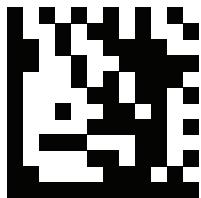


Set

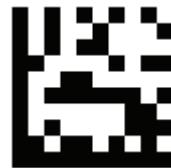


Caps Lock Off (Default)



Caps Lock On

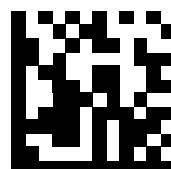


End

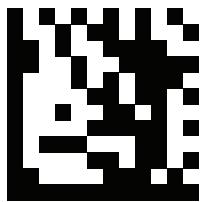


Set




Alphabet always upper case

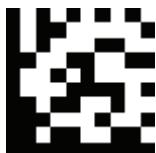

Alphabet always lower case

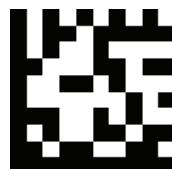


Override

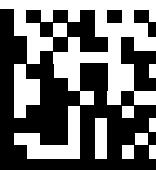

End

## ***Function Key Mapping***

Scan the following barcodes to enable or disable Function Key Mapping.

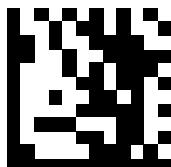


Set



Disable Function Key Mapping (Default)



Enable Function Key Mapping

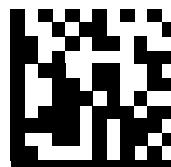


End

## **ASCII Code**


For parameters requiring specific numeric values, scan the appropriately numbered barcode(s).




Enter

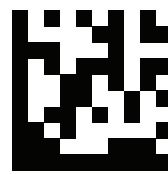


!

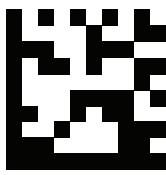


"

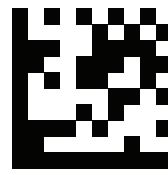


#

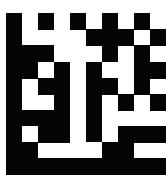


\$

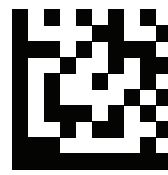


Space

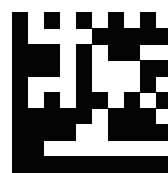


%

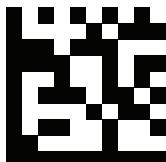


&

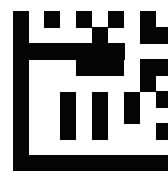


,

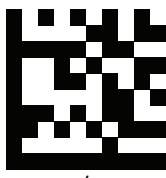


(

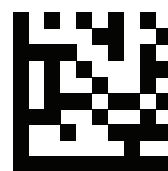







)

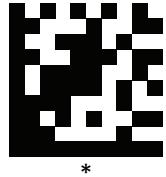


\*

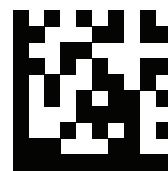


+

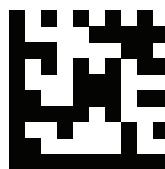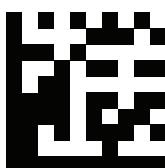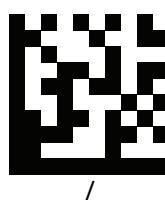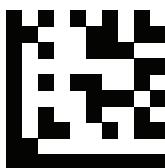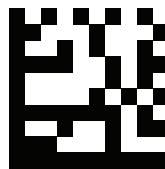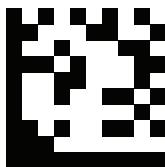


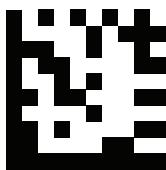


<

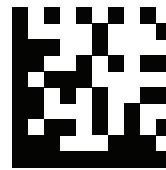


=

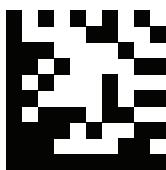


>

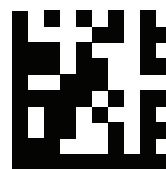


?

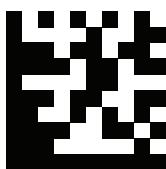


@

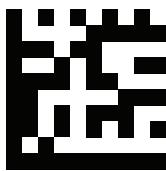


0

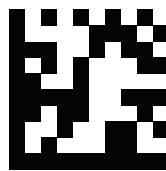


1

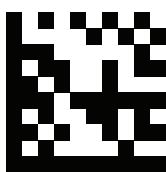


2

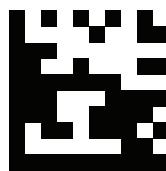


3

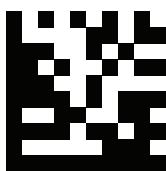


4

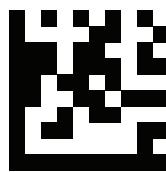


5

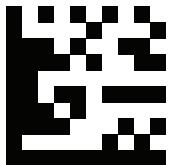


6

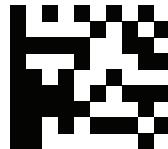


7

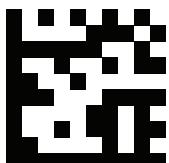

8

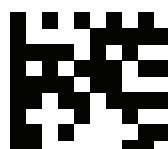


9

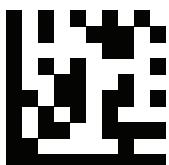


A

(Function Key  
Mapping: Ctrl+a)

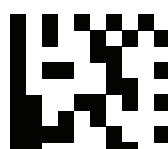


B

(Function Key  
Mapping: Ctrl+b)

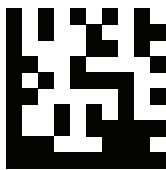


C

(Function Key  
Mapping: Ctrl+c)

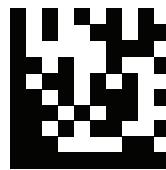


D

(Function Key  
Mapping: Ctrl+d)

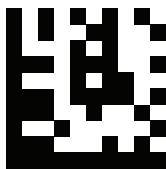


E

(Function Key  
Mapping: Ctrl+e)

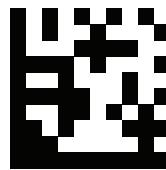


F

(Function Key  
Mapping: Ctrl+f)

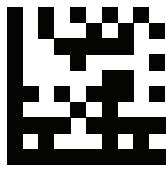


G

(Function Key  
Mapping: Ctrl+g)

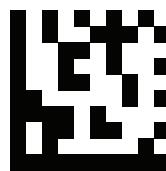


H

(Function Key  
Mapping: Ctrl+h)

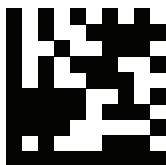


I

(Function Key  
Mapping: Ctrl+i)

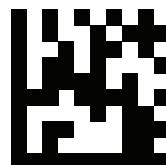


J

(Function Key  
Mapping: Ctrl+j)

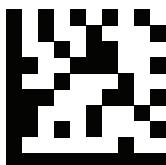


K

(Function Key  
Mapping: Ctrl+k)

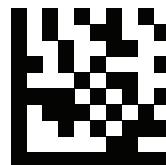


L


(Function Key  
Mapping: Ctrl+l)

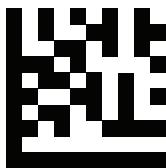


M  
(Function Key  
Mapping: Ctrl+m)

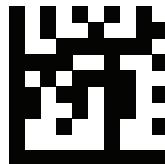


N  
(Function Key  
Mapping: Ctrl+n)

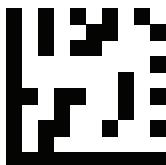


O  
(Function Key  
Mapping: Ctrl+o)

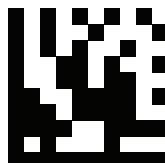

P  
(Function Key  
Mapping: Ctrl+p)

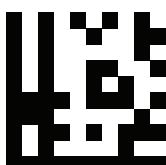


Q  
(Function Key  
Mapping: Ctrl+q)

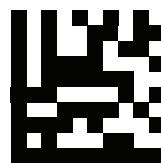


R

(Function Key  
Mapping: Ctrl+r)

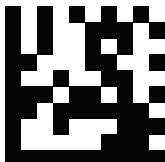


S

(Function Key  
Mapping: Ctrl+s)

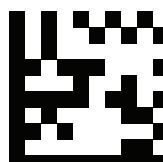


T

(Function Key  
Mapping: Ctrl+t)

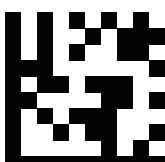


U

(Function Key  
Mapping: Ctrl+u)

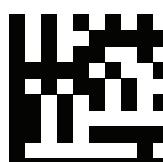


V


(Function Key  
Mapping: Ctrl+v)

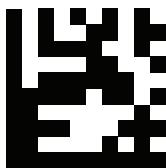


W  
(Function Key  
Mapping: Ctrl+w)

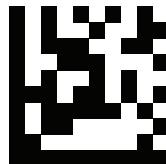


X  
(Function Key  
Mapping: Ctrl+x)

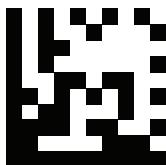


Y  
(Function Key  
Mapping: Ctrl+y)

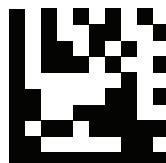


Z  
(Function Key  
Mapping: Ctrl+z)

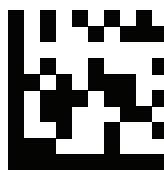


a

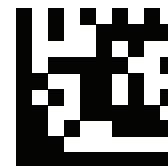


b

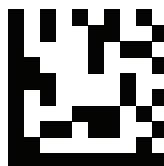


c

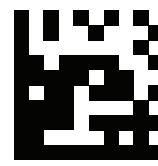


d

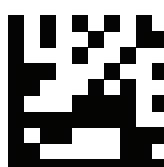


e

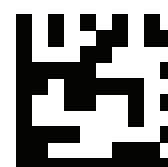


f

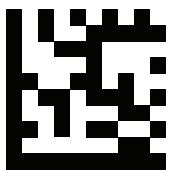


g

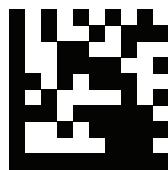


h

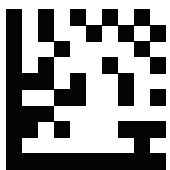


i

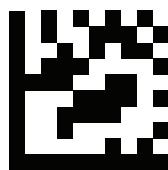


j

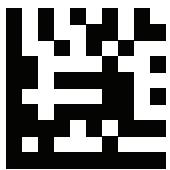


k

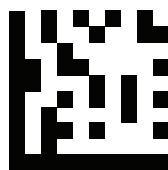


l

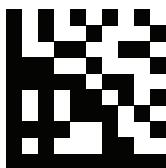


m

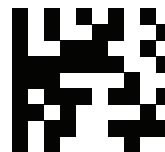


n

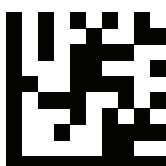


o

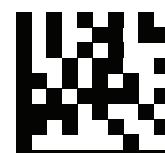


p

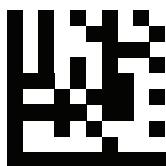


q

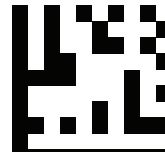


r

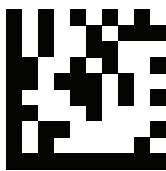


s

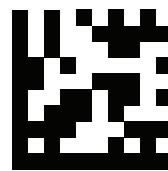


t

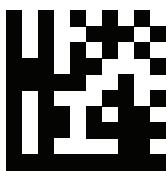


u

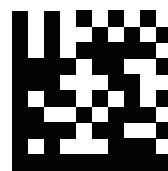


v

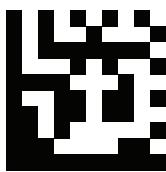


w

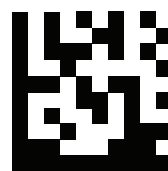

x

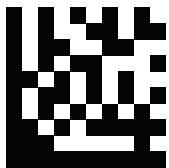

y

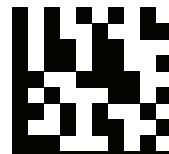

z



Insert



Delete



Home



End



Up arrow



Down arrow



Left arrow



Right arrow



Tab



Backspace



Shift




ESC



Page up



Page down

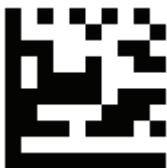

F1



F2



F3



F4



F5



F6



F7



F8



F9



F10



F11



F12

# JavaPOS Driver V2.00 for Win32/Win64

## ***JavaPOS Version***

Our JavaPOS driver now is compatible with JavaPOS1.7.

## ***Install the Java2 Runtime Environment***

The JRE is Java's virtual machine that allows for applications to run on the host computer. To be able to run the JavaPOS application, you need a 1.7 version JRE. Ignore the following steps if you already have a JavaPOS1.7 or a later version in your host computer.

- Go to <http://java.sun.com>, and select this version of Java Runtime Environment.
- Install the program following the instructions.

## ***Install the Service Object and JavaPOS files***

In the “\Driver” folder, there are two files: ZbtJavapos.jar and jpos.xml. Please include ZbtJavapos.jar at your CLASSPATH and also copy the related “JPosEntry” option from the jpos.xml to your application’s jpos.xml.

## ***How to use RS232 scanner with JavaPOS Driver***

Install the Java RXTXcomm API

In the \RXTXcomm folder, there are four files: rtxSerial.dll , rtxParallel.dll, and RXTXcomm.jar. Please do the following steps to install the library.

1. Copy rtxSerial.dll and rtxParallel.dll to C:\Windows\system32.
2. Copy RXTXcomm.jar to your <JRE Install Folder>\lib directory.

Disable (Default)



Enable



## ***Use barcodes to configure the Handheld scanner***

JavaPOS configuration barcodes:


**Start of Configuration**



**RS-232**



**JPOS Enable**

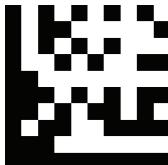

**End of Configuration**



## **Running the JavaPOS Test utility**

Please run the test application POStest.sh to evaluate your installation.

## **How to use JavaPOS driver at your application**

1. Add “ZbtJavaPos.jar” from the “\Driver” folder to the CLASSPATH and copy the related “JPosEntry” option from the “**jpos.xml**”.
2. Modify the jpos.xml based on your COM Port
3. Example of jpos.xml file content

```
<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE JposEntries PUBLIC "-//JavaPOS//DTD//EN"
           "jpos/res/jcl.dtd">
<JposEntries>
<!--Saved by JavaPOS jpos.config/loader (JCL) version 2.2.0 on 2010/3/11 10:16-->

<JposEntry logicalName="Z3172P">
    <creation factoryClass="com.zbt.jpos.ZbtJposServiceInstanceFactory"
serviceClass="com.zbt.jpos.ScannerService"/>
    <vendor name="" url="" />
    <jpos category="Scanner" version="1.7" />
    <product description="Scanners" name="Scanner" url="" />

    <!--Other non JavaPOS required property (mostly vendor properties and bus specific
properties i.e. RS232 )-->
    <prop name="deviceType" type="String" value="2D" />
    <prop name="deviceBus" type="String" value="RS232" />
    <prop name="baudRate" type="String" value="9600" />
    <prop name="parity" type="String" value="None" />
    <prop name="portName" type="String" value=" COM1" />
    <prop name="flowControl" type="String" value="None" />
    <prop name="stopBits" type="String" value="1" />
    <prop name="dataBits" type="String" value="8" />
</JposEntry>

<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE JposEntries PUBLIC "-//JavaPOS//DTD//EN"
           "jpos/res/jcl.dtd">
<JposEntries>

</JposEntries>
```

Note: The default baud rate : 2D scanner =9600

## **How to use USB scanner with JavaPOS Driver**

Configuring the Scanner via barcodes:

- Scan the barcodes in the sequence below to configure the scanner to usb-serial mode.

**JavaPOS configuration bar codes:**

**Start of Configuration**



**USB Virtual COM Port**



**JPOS Enable**



**End of Configuration**



## ***Install the Java RXTXcomm API***

In the \RXTXcomm folder, there are four files: rtxSerial.dll , rtxParallel.dll, and RXTXcomm.jar. Please do the following steps to install the library.

1. Copy rtxSerial.dll and rtxParallel.dll to C:\Windows\system32
2. Copy RXTXcomm.jar to your <JRE Install Folder>\lib directory.

## ***Running the JavaPOS Test utility***

Please run the test application to evaluate your installation.

## **How to Use JavaPOS Driver at your application**

1. In the “\Driver” folder, copy “**ZbtJavaPos.jar**” and “**jpos.xml**” to your work folder.
2. Modify the jpos.xml .
3. Example of jpos.xml file content

```
<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE JposEntries PUBLIC "-//JavaPOS//DTD//EN"
          "jpos/res/jcl.dtd">
<JposEntries>
<!--Saved by JavaPOS jpos.config/loader (JCL) version 2.2.0 on 2010/3/11 10:16-->

<JposEntry logicalName="Z3172P">
    <creation factoryClass="com.zbt.jpos.ZbtJposServiceInstanceFactory"
serviceClass="com.zbt.jpos.ScannerService"/>
    <vendor name="" url="" />
    <jpos category="Scanner" version="1.7" />
    <product description="Scanners" name="Scanner" url="" />

    <!--Other non JavaPOS required property (mostly vendor properties and bus specific properties i.e.
RS232 )-->
    <prop name="deviceType" type="String" value="2D" />
    <prop name="deviceBus" type="String" value="RS232" />
    <prop name="baudRate" type="String" value="115200" />
    <prop name="parity" type="String" value="None" />
    <prop name="portName" type="String" value="COM56" />
    <prop name="flowControl" type="String" value="None" />
    <prop name="stopBits" type="String" value="1" />
    <prop name="dataBits" type="String" value="8" />
</JposEntry>

<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE JposEntries PUBLIC "-//JavaPOS//DTD//EN"
          "jpos/res/jcl.dtd">
<JposEntries>
</JposEntries>
```